

Packard **SERVICE TECHNICAL**
Bulletin

55T-46
Dealer 37
November 15, 1955

To: ZONES AND DEALERS


Subject: ULTRAMATIC PUSH BUTTON CONTROL

The Ultramatic transmission with push button control has a safety feature in that it automatically goes into "Park" when the ignition switch is turned off.

If the car is to be moved with the engine not running, it will be necessary to turn the ignition switch on and push the "N" button (Neutral) to release the transmission lock which permits the rear wheels to turn.

NOTE: Leave the ignition switch on while the car is being moved.

Very truly yours,

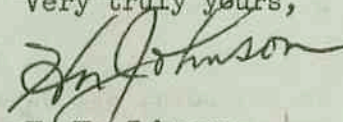

H. W. Johnson
Assistant Service Manager

HGL:mu