

# PACKARD MOTOR CAR COMPANY


## DETROIT MICHIGAN

February 20, 1929

To: Packard Distributors and Dealers

Subject: SPRING BRAKE FOR IGNITION DISTRIBUTOR

TO BE NOTED AND INITIALED BY

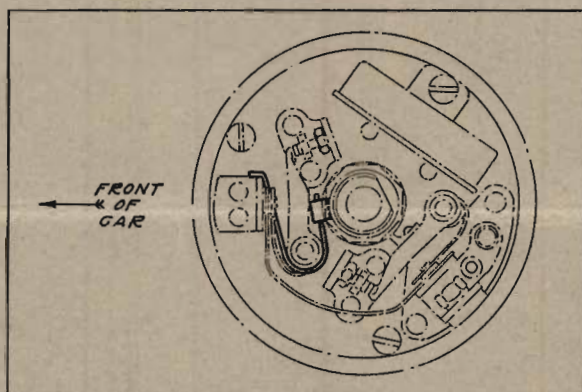

accomplished by a small rubbing block which is pressed against the driving shaft by a spring wire as shown in the illustration.

The installation should be made as follows:

1. Remove distributor cap and rotor brush.
2. Remove the breaker arm nearest the radiator.
3. Install the breaker cam brake with the fibre block in the groove below the cam, passing the bend in the wire around the breaker hinge pin with the hook end of the wire bearing against the spring binding post as shown. The fibre block should be coated with vaseline before installing.
4. Replace breaker arm rotor and cap.

These units will be carried under North East piece #22801, and may be obtained from your North East Service Station. If no such station is available the parts may be ordered from us, specifying:

1--0171942 Distributor breaker cam brake

Yours very truly,

PACKARD MOTOR CAR COMPANY

T. A. STALKER,  
Manager Technical Department.

TAS:N