

Index to Active Technical Letters

MOTOR—GENERAL

Brace	Motor to Frame	Six	1832
Breather	New Type	Six and Eight	1841
Control Valve	Eliminate Leak	Six and Eight	1841
Gasket	Cylinder Head	Six	1837
Gear Cover	Breather	Six and Eight	1841
Lubrication	Specifications	Six and Eight	1805
Standardizing	Suggested Changes	Eight	1757
Timing	Instructions	Eight	1768

CYLINDER GROUP

Connecting Rods	Aligning	All Models	1804
Cylinder	Chamfering Tool	Six and Eight	1731
Cylinders	Chart on Re-grinding	All Models	1833
Cylinder Head	Gasket	Six	1837
Pistons	Fitting	Six and Eight	1839
Pistons	Scoring and Scuffing	Six and Eight	1835
Piston Pin	Bushing	Six and Eight	1837
Piston Pin	Drilled, Eliminate	Six	1841
Piston Slap	Elimination of	Six and Eight	1817

ELECTRICAL SYSTEM

Generator	Sprocket Support	Six and Eight	1802
Generator	Wiring	Six and Eight	1788

CLUTCH AND TRANSMISSION

Pinion Shaft	Spiral Groove	Six and Eight	1842
Second Speed Gear	Locking Device	Six and Eight	1819
Shifter Bearing	Lubricator	Six and Eight	1836

REAR AXLE

Springs	Guarantee	All Models	1797
Stabilizers	Rubber Gasket	Eight	1800
Torque Arm	Springs	Six	1767

DIFFERENTIAL

Gear and Pinion	12-56	Eight	1808
-----------------	-------	-------	------

BRAKES

Adjustment	Hand and Foot	Six and Eight	1781
Brake Shoes	Oil Leak	Six and Eight	1840
Chatter	Front Brakes	Six and Eight	1840

FRONT AXLE AND STEERING

Adjustment	Lubrication and Bushing Lock	Six and Eight	1816
Adjustment	Standard	Six and Eight	1838
Bearings	Steering Knuckle	Six and Eight	1840
Gear Assembly	Adjustments	Eight	1774
Shimmy	Causes	Six and Eight	1806
Shimmy	Elimination	Six and Eight	1838
Springs	Guarantee	All Models	1797
Springs	Special	Six and Eight	1837
Springs—Front	Strike Thru	Six and Eight	1806
Stabilator	Adjustment	Eight	1772
Steering Knuckle	Bearings	Six and Eight	1840
Tramp	Elimination	Six and Eight	1838
Wander	Elimination	Six and Eight	1838
Whip	Elimination	Six and Eight	1838

BRAKES (See Rear Axle Brakes)

TIRES

WHEELS

Wheels	Squeaks	Six and Eight	1829
--------	---------	---------------	------

BODY

Ventilator	Gaskets	Six and Eight	1798
------------	---------	---------------	------

COLD WEATHER INSTRUCTIONS

Starting	Proper Methods		1799
<u>MISCELLANEOUS</u>			
Accessories	Factory Responsibility	All Models	1750
Bearings—SRB	Care of	All Models	1818
Chassis Lubrication	Tank and Gun	All Models	1812
Cushions	Rebuilding	Six	1841
Lubrication	Motor Specifications	Six and Eight	1805
Lubrication	Chassis System	Six and Eight	1831
Lubrication	Clutch Bearing	Six and Eight	1836
Lubrication	Speedometer Cable	Six and Eight	1842
Lubrication	Excess	Six	1841
Lubrication	Control Valve Leak	Six and Eight	1841
Patent Plate	Use of	All Models	1823

ONLY THESE LETTERS ARE ACTIVE AND WILL BE SUPPLIED ON REQUEST

1731	1781	1802	1812	1823	1834	1839
1750	1788	1804	1816	1829	1835	1840
1757	1797	1805	1817	1831	1836	1841
1768	1798	1806	1818	1832	1837	1842
1774	1799	1808	1819	1833	1838	