

CODE NO.	PART NO.	DESCRIPTION AND MODELS	PER CAR
FRONT			
14.000	SPRING FRONT		
373862	Load 1890#	rate 81#, used with air conditioning, 2000-10	2
367653	Load 1740#	rate 76#, 2000-10-2100	2
373862	Load 1890#	rate 81#, 1951-2001-11-2101-11.	2
382373	Load 2040#	rate 81#, used with air conditioning, 1951-2001-11	2
367740	Load 2030#	rate 90#, 2003-06-2103-06	2
382374	Load 2180#	rate 90#, used with air conditioning, 2003-06	2
387552	Load 2520#	rate 120#, 2126	2
387864	Load 1780#	rate 100#, Canadian & Export, 2100	2
387865	Load 1930#	rate 100#, Canadian & Export, 2101-11	2
387866	Load 2070#	rate 120#, Canadian & Export, 2103-06	2
14.002	BUMPER ASSEMBLY - SPRING FRONT COMPRESSION		
373881	1951-2000-01-03-06-10-11		2
384213	2100-01-03-06-11-26-30		2
14.006	RETAINER - SPRING FRONT COMPRESSION BUMPER		
216724	1951-2000-01-03-06-10-11-2100-01-03-06-11-26-30		2

CODE NO.	PART NO.	DESCRIPTION AND MODELS	PER CAR
FRONT-Continued			
14.008	INSULATOR - SPRING FRONT		
367709	1951-2000-01-03-06-10-11-2100-01-03-06-11-26-30		2
14.009	BUMPER ASSEMBLY - SPRING FRONT REBOUND		
351689	1951-2000-01-03-06-10-11-2100-01-03-06-11-26-30		2
367494	Bumper bracket		2
REAR			
14.100	SPRING - REAR		
378640	Load 870#	rate 105#, 2000-1582, 2001-1592, 2100-1682, 2101-1692, 2111-1612	2
378641	Load 830#	rate 105#, 2000-1585-88, 2001-1585-95, 2100-1685, 2101-1695, 2111-1615	2
378640	Load 870#	rate 105#, used with air conditioning, 2000-1585-88, 2001-1595-98	2
378646	Load 940#	rate 105#, used with air conditioning, 2000-1582, 2001-1592	2
379175	Load 940#	rate 110#, 1951, 2003-1575, 2006-1525, 2103-1675, 2106-1625	2
379174	Load 980#	rate 110#, 2003-1572, 2006-1522, 2103-1672, 2106-1622	2
379174	Load 980#	rate 110#, used with air conditioning, 2003-1575, 2006-1525	2

REAR SPRING LEAF SEPARATOR IDENTIFYING CHART

The location of the Separator, counting from front to rear of Spring, is shown opposite the Spring Part Number and under the Separator Part Number.

REAR SPRING PART NUMBER	PART NUMBER AND DESCRIPTION OF SEPARATOR				
	347427 RUBBER (5/16)	327753-(5%) ANTIMONY LEAD	327954 (7-1/2%) ANTIMONY LEAD	327726 (10%) ANTIMONY LEAD	358492 SILENITE
362515	All 18 Pcs.
377344	1-12	6-7	5-8	4-9	2-3-10-11
378639	1-12	6-7	5-8	4-9	2-3-10-11
378640	1-12	6-7	5-8	4-9	2-3-10-11
378641	1-12	6-7	5-8	4-9	2-3-10-11
378646	1-12	6-7	5-8	4-9	2-3-10-11
379174	1-12	6-7	5-8	4-9	2-3-10-11
379175	1-12	6-7	5-8	4-9	2-3-10-11
379176	1-12	6-7	5-8	4-9	2-3-10-11
382973	All 18 Pcs.
382974	All 18 Pcs.
384826	All 18 Pcs.
387556	1-2-6-7-8-11-12-13-17-18	9-10	3-4-5-14-15-16
387805	1-16	2-3-4-5-6-7-8-9-10-11-12-13-14-15
387867	All 12 Pcs.
387877	1-14	6-9	5-10	4-11	2-3-7-8-12-13

CODE NO.	PART NO.	DESCRIPTION AND MODELS	PER CAR	CODE NO.	PART NO.	DESCRIPTION AND MODELS	PER CAR
REAR-Continued				REAR-Continued			
14.100		SPRING - REAR (Cont'd)		14.111		OIL RETAINER ASSEMBLY - REAR LEAF SEPARATOR	
395179		Load 1040# rate 110#, used with air conditioning, 1951-2103-1572, 2106-1522	2	379829		use only with antimony lead separators, 1951-2000-01-03-06-10-11-2100-01-03-06-11-30	x
412424		Load 1250# rate 130#, 2126	2				
387867		Load 925# rate 125#, Canadian & Export, 2100-01-11	2	14.113		CLIP - REAR REBOUND	
387877		Load 1070# rate 135#, Canadian & Export, 2103-06	2	375854		intermediate, 1951-2000-01-03-06-10-11-2100-01-03-06-11-26-30	4
14.1015		BLOCK - SPRING REAR		375855		center, 1951-2000-01-03-06-10-11-2100-01-03-06-11-30	2
367728		right, 1951-2003-06-2103-06-26-30	1	375856		center, 2126	2
362661		right, 2000-01-10-11-2100-01-11	1	14.114		BUMPER - REAR RUBBER	
367727		left, 1951-2003-06-2103-06-26-30	1	355047		1951-2000-01-03-06-10-11-2100-01-03-06-11-26-30	2
362660		left, 2000-01-10-11-2100-01-11	1	14.116		CLIP - REAR RUBBER BUMPER	
14.1025		BOLT AND NUT - SPRING REAR CENTER		320394		1951-2000-01-03-06-10-11-2100-01-03-06-11-26-30	4
364251		1951-2000-01-03-06-10-11-2100-01-03-06-11-26-30	2	7388		Screw 3/8-24 x 1 (50.003) 1951-2000-01-03-06-10-11-2100-01-03-06-11-26-30	4
14.105		BUSHING - SPRING REAR		14.117		SHACKLE - REAR	
347126		rubber, 1951-2000-01-03-06-10-11-2100-01-03-06-11-30	12	347412		1951-2000-01-03-06-10-11-2100-01-03-06-11-30	2
354999		rubber, 2126	12	354975		2126	2
14.1051		BOLT - SPRING REAR BUSHING		14.1170		SHACKLE KIT - REAR	
347431		front, 1951-2000-01-03-06-10-11-2100-01-03-06-11-30	2	356860		1951-2000-01-03-06-10-11-2100-01-03-06-11-30	1
330892		front, 2126	2	14.119		LINK - REAR SHACKLE	
7156		Nut, self-locking, (50.120) 1951-2000-01-03-06-10-11-2100-01-03-06-11-30	6	347414		1951-2000-01-03-06-10-11-2100-01-03-06-11-30	2
7157		Nut, self-locking, (50.120) 2126	6	354974		2126	2
14.106		U-BOLT - SPRING REAR					
320747		1951-2003-06-2103-06-30	4				
351716		2000-01-10-11-2100-01-11	4				
324059		2126	4				
114608		Nut 1/2-20 (50.100) 1951-2000-01-03-06-10-11-2100-01-03-06-11-26-30	8				
14.109		LEAF - REAR MAIN					
354406		54-3/8 x 2 x 1.130 eye, 1951-2000-01-03-06-10-11-2100-01-03-06-11-30	2				
382470		54-3/8 x 2 x 1-3/8 eye, 2126	2				
14.110		SEPARATOR - REAR LEAF					
347427		rubber 5/16", 1951-2000-01-03-06-10-11-2100-01-03-06-11-30	x				
358492		silenite, 1951-2000-01-03-06-10-11-2100-01-03-06-11-26-30	x				
327954		7-1/2% antimony lead, 1951-2000-01-03-06-10-11-2100-01-03-06-11-30	x				
327753		5% antimony lead, 1951-2000-01-03-06-10-11-2100-01-03-06-11-30	x				
327726		10% antimony lead, 1951-2000-01-03-06-10-11-2100-01-03-06-11-30	x				