

| CODE NO. | PART NO. | DESCRIPTION AND MODELS | PER CAR | CODE NO. | PART NO. | DESCRIPTION AND MODELS | PER CAR |
|----------|----------|------------------------|---------|----------|----------|------------------------|---------|
|----------|----------|------------------------|---------|----------|----------|------------------------|---------|

TOOLS

16.002 JACK, JACK BASE, HANDLE (WHEEL WRENCH) AND CONTAINER
 387666 1951-2000-01-03-06-10-11-2100-01-03-06-11-26 1

16.006 TOOL CONTAINER AND TOOLS
 317620 export, includes six open end wrenches, pliers, monkey wrench, two screw drivers, spark plug wrench and hammer, 1951-2000-01-03-06-10-11-2100-01-03-06-11-26 1

16.0066 TOOL AND JACK SET COMPLETE
 387780 includes jack with base and handle (wheel wrench), spark plug wrench, pliers and screw driver, 1951-2000-01-03-06-10-11-2100-01-03-06-11-26 1
 387797 export, includes jack with base and handle (wheel wrench), tool container and tools, grease gun and tire pump, 1951-2000-01-03-06-10-11-2100-01-03-06-11-26 1

16.012 WRENCH - JACK HANDLE AND WHEEL
 373650 1951-2000-01-03-06-10-11-2100-01-03-06-11-26 1

PackardInfo.com