



ELECTRICAL WIRING DIAGRAM

CABLE CODE AND IDENTIFICATION CODE


NO. GA.	COLOR	LOCATION	NO. GA.	COLOR	LOCATION
1 10	Red	Starter Motor To Voltage Regulator	45 16	Green—Black Tcr.	Kick Switch To O. D. Solenoid
2 10	Red—Green Tcr.	Starter Mtr. To 30 Amp. Circuit Breaker	46 16	Orange—Green Tcr.	Ignition Switch To O. D. Relay
3 10	Red—Black Tcr.	Generator To Voltage Regulator	47 16	Green—Black Tcr.	Kick Switch To Ignition Coil
4 14	Black	Hdlp. Junc. Block To Volt. Reg. Ground	48 12	Black—2 Y. Tcrs.	O. D. Relay To O. D. Solenoid
4A 14	Black	Gen. Ground To Hdlp. Junc. Block	49 12	Red—Black Tcr.	Starter Solenoid To O. D. Relay
4B 14	Black	L. Junc. Block To R. Junc. Block	51 14	Black	Left Horn To Right Horn
5 16	White—Black Tcr.	Gen. Field To Volt. Reg. Field	51A 14	Black	Left Horn To Horn Relay
6 16	Blue	Hdlp. Switch To Hdlp. Junc. Block	60 18	Brown—Blk-Red X Tcr.	Fuel Ga. Sending Unit To Fuel Ga.
6A 16	Blue	L. Junc. Block To R. Junc. Block	62 16	Yellow—Red Tcr.	Trans. Sw. To Car Starter Sw.
7 14	Brown	Foot Dim. Switch To hdlp. Junc. Block			
7A 14	Brown	L. Junc. Block To R. Junc. Block			
8 14	Green	Foot Dim. Switch To Hdlp. Junc. Block			
8A 14	Green	L. Junc. Block To R. Junc. Block			
9 12	Red	Starter Motor To Horn Relay			
10 16	Black—2 Red Tcrs.	Horn Button Cable To Horn Relay	NO. GA. COLOR MODELS 2572-2552 LOCATION		
11 16	Blue—2 Y. Tcrs.	Temp. Sending Unit To Temp. Gauge	66 14	Red	Pump To Circuit Breaker
12 14	Black	Blower Motor To Blower Switch	67 14	Green	Pump To Splice No. 1
13 14	Red	Stop Lmp. Sw. To 30 Amp. Circ. Breaker	67A 14	Green	Master Switch To R.F. Window Sw.
15 14	White—Green	Hdlp. Switch To Foot Dimmer Switch	67B 14	Green	Splice No. 3 To Splice No. 5
16 18	Green—Black Tcr.	Ft. Dimmer Sw. To High Beam Ind. Lmp.	67C 14	Green	L.R. Window Sw. To R.R. Win. Sw.
17 14	Yellow	Ignition Switch To Ignition Coil	67D 14	Green	Splice No. 8 To Fr. Seat Switch
18 16	Brown—White Tcr.	Oil Send. Unit To Pressure Ind. Lamp	68 14	Red	Circuit Breaker To Splice No. 2
19 16	Yellow—Red Tcr.	Ign. Sw. To Car Strtr. Sw. (Std. Trans.)	68A 14	Red	Master Sw. To R.F. Window Switch
19 16	Yellow—Red Tcr.	Ign. Sw. To Ultramatic Safety Sw.	68B 14	Red	Splice No. 4 To Splice No. 6
20 16	Green—White Tcr.	Car Starter Sw. To Starter Solenoid	68C 14	Red	L.R. Window Sw. To R.R. Win. Sw.
21 12	Red—2 White Tcrs.	Ignition Switch To Splice No. 6	68D 14	Red	Splice No. 7 To Front Seat Switch
22 14	Black—Blue Tcr.	Ign. Sw. To 10 Amp. Circuit Breaker	69 14	Yellow—Green Tcr.	Master Sw. To L. Front Window Cyl.
23 16	Black—Green Tcr.	Courtesy Lamp To Splice No. 5	70 16	Yellow—Red Tcr.	Splice No. 3 To R. Front Window Sw.
23A 16	Black—Green Tcr.	Automatic Door Sw. To Splice No. 4	70A 16	Yellow—Red Tcr.	Splice No. 9 To R. Front Win. Cyl.
23B 16	Black—Green Tcr.	Automatic Door Sw. To Splice No. 5	71 14	Yellow	Master Sw. To L. Rear Window Sw.
23C 16	Black—Green Tcr.	Map Lamp Switch To Splice No. 4	71A 14	Yellow	Splice No. 10 To L. Rear Win. Cyl.
23D 16	Black—Green Tcr.	Splice No. 4 To Splice No. 5	72 14	Yellow—Black Tcr.	Master Sw. To R. Rear Window Sw.
23E 16	Black—Green Tcr.	Courtesy Lamp To Splice No. 4	72A 14	Yellow—Black Tcr.	Splice No. 11 To R. Rear Win. Cyl.
24 16	White—Black Tcr.	Courtesy Lamp To Splice No. 3	73 14	Yellow	Front Seat Switch To Front Seat Cyl.
24A 16	White—Black Tcr.	30 Amp. Circuit Brkr. To Splice No. 3	74 6	Black	Pump To Starter Motor
24B 16	White—Black Tcr.	Courtesy Lamp To Splice No. 3			
25 16	Black—Blue Tcr.	Ignition Switch To Splice No. 2	NO. GA. COLOR MODELS 2577-2579 LOCATION		
25A 16	Black—Blue Tcr.	Splice No. 2 To Oil Pressure Ind. Lamp	66 14	Red	Pump To Circuit Breaker
25B 16	Black—Blue Tcr.	Splice No. 2 to Bat. Discharge Ind. Lamp	67 14	Green	Pump To Splice No. 1
27 18	White—Red X Tcr.	Dir. Sig. Flasher To Dir. Sig. Ind. Lamp	67A 14	Green	Master Sw. To Top Control Valve
28 16	Red	10 Amp. Circuit Breaker To Flasher	67B 14	Green	Top Control Valve To R.F. Win. Sw.
29 16	Red	10 Amp. Cir. Breaker To Inst. Volt. Reg.	67C 14	Green	Splice No. 3 To Splice No. 7
30 14	Black	Rheostat To Splice No. 1	67D 14	Green	Splice No. 5 To Seat Switch
30A 18	Black	Inst. Cluster Socket To Splice No. 1	67E 14	Green	L. Qtr. Win. Sw. To R. Qtr. Win. Sw.
30B 18	Black	Inst. Cluster Socket To Splice No. 1	68 14	Red	Circuit Breaker To Splice No. 2
30C 18	Black	Inst. Cluster Socket To Splice No. 1	68A 14	Red	Master Switch To Top Control Valve
30D 18	Black	Inst. Cluster Socket To Splice No. 1	68B 14	Red	Top Control Valve To R.F. Win. Sw.
31 16	Black—Orange Tcr.	Volt. Reg. To Bat. Discharge Ind. Lamp	68C 14	Red	Splice No. 4 To Splice No. 8
32 16	Black	Headlamp Switch To Rheostat	68D 14	Red	Splice No. 6 To Seat Switch
33B 16	Black	Headlamp Switch To Left Tail Lamp	68E 14	Red	L. Qtr. Win. Sw. To R. Qtr. Win. Sw.
33C 16	Black	Right Tail Lamp To Splice	69 14	Yellow—Green Tcr.	Master Sw. To L.F. Window Cyl.
33D 16	Black	License Lamp To Splice	70 14	Yellow—Red Tcr.	Master Sw. To R.F. Win. Switch
33E 16	Black	Left Tail Lamp To Splice	70A 14	Yellow—Red Tcr.	Splice No. 9 To R.F. Window Cyl.
33F 16	Black	Right Tail Lamp To Splice	71 14	Yellow	Master Sw. To L. Qtr. Window Sw.
34 16	Orange	Dir. Sig. Sw. Plug To L.F. Cable Con.	71A 14	Yellow	Splice No. 10 To L. Qtr. Win. Cyl.
34A 16	Orange	L.F. Cable Con. To R.F. Cable Con.	72 14	Yellow—Black Tcr.	Master Sw. To R. Qtr. Window Sw.
35 16	White	Dir. Sig. Sw. Plug To L.F. Cable Con.	72A 14	Yellow—Black Tcr.	Splice No. 11 To R. Qtr. Win. Cyl.
36 16	Yellow	Dir. Sig. Sw. Plug To Inst. Panel Con.	73 14	Yellow	Front Seat Sw. To Front Seat Cyl.
36A 16	Yellow	Inst. Panel Con. To R. Tail Lamp	74 6	Black	Pump To Starter Motor
37 16	Brown	Dir. Sig. Sw. Plug To Inst. Panel Con.			
37A 16	Brown	Inst. Panel Con. To L. Tail Lamp			
38 14	Green	Dir. Sig. Sw. Plug To Stop Lamp Sw.			
39 16	Blue	Dir. Sig. Sw. Plug To Flasher Unit			
40 16	Green	Hdlp. Switch To Ign. Switch Lamp			
41 12	Red	Hdlp. Cir. Breaker To Splice No. 6			
43 16	Yellow	Kick Switch To O. D. Relay			
44 16	Yellow	Kick Switch To Lockout Switch			

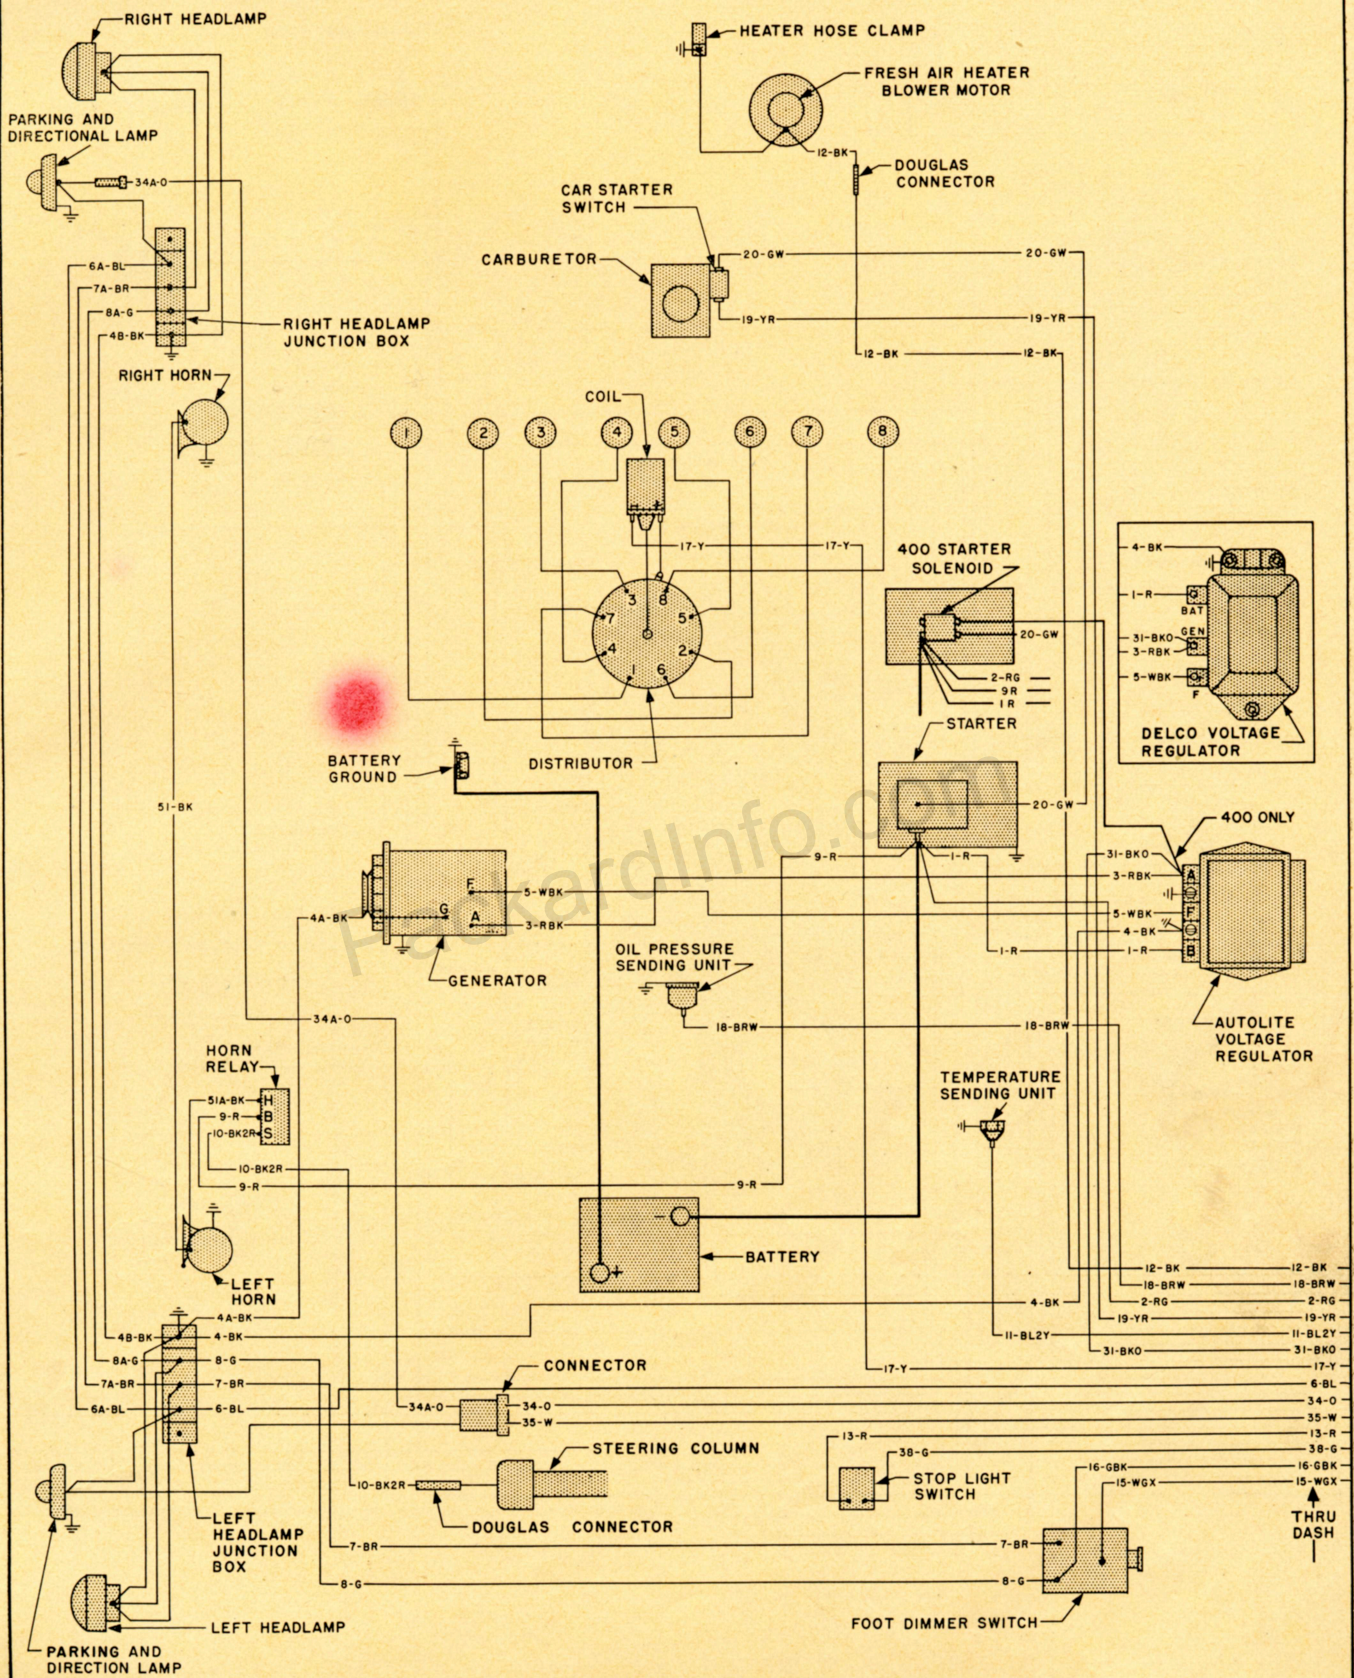


25th Series Engine Compartment Wiring Diagram

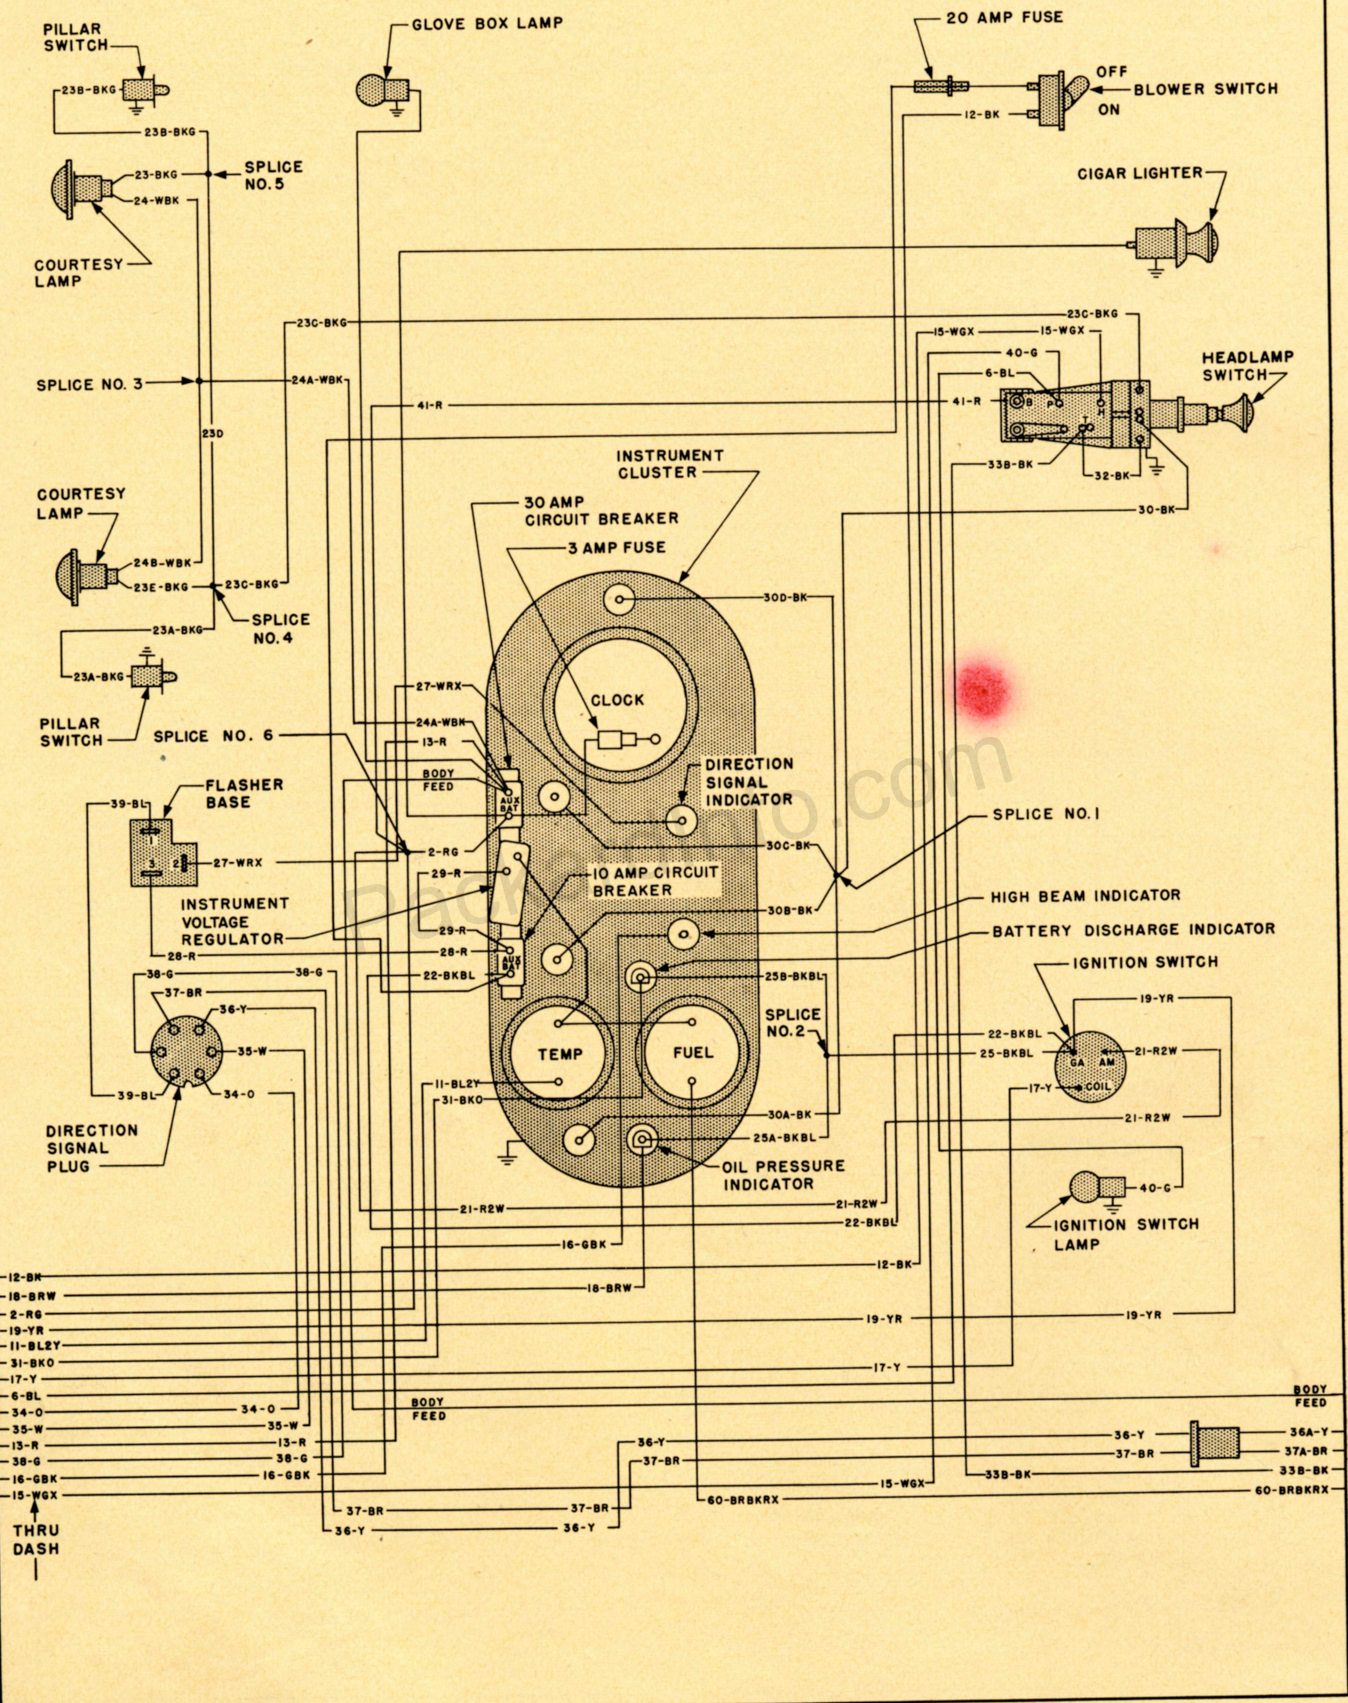


95th Series Driver's Compartment Wiring Diagram

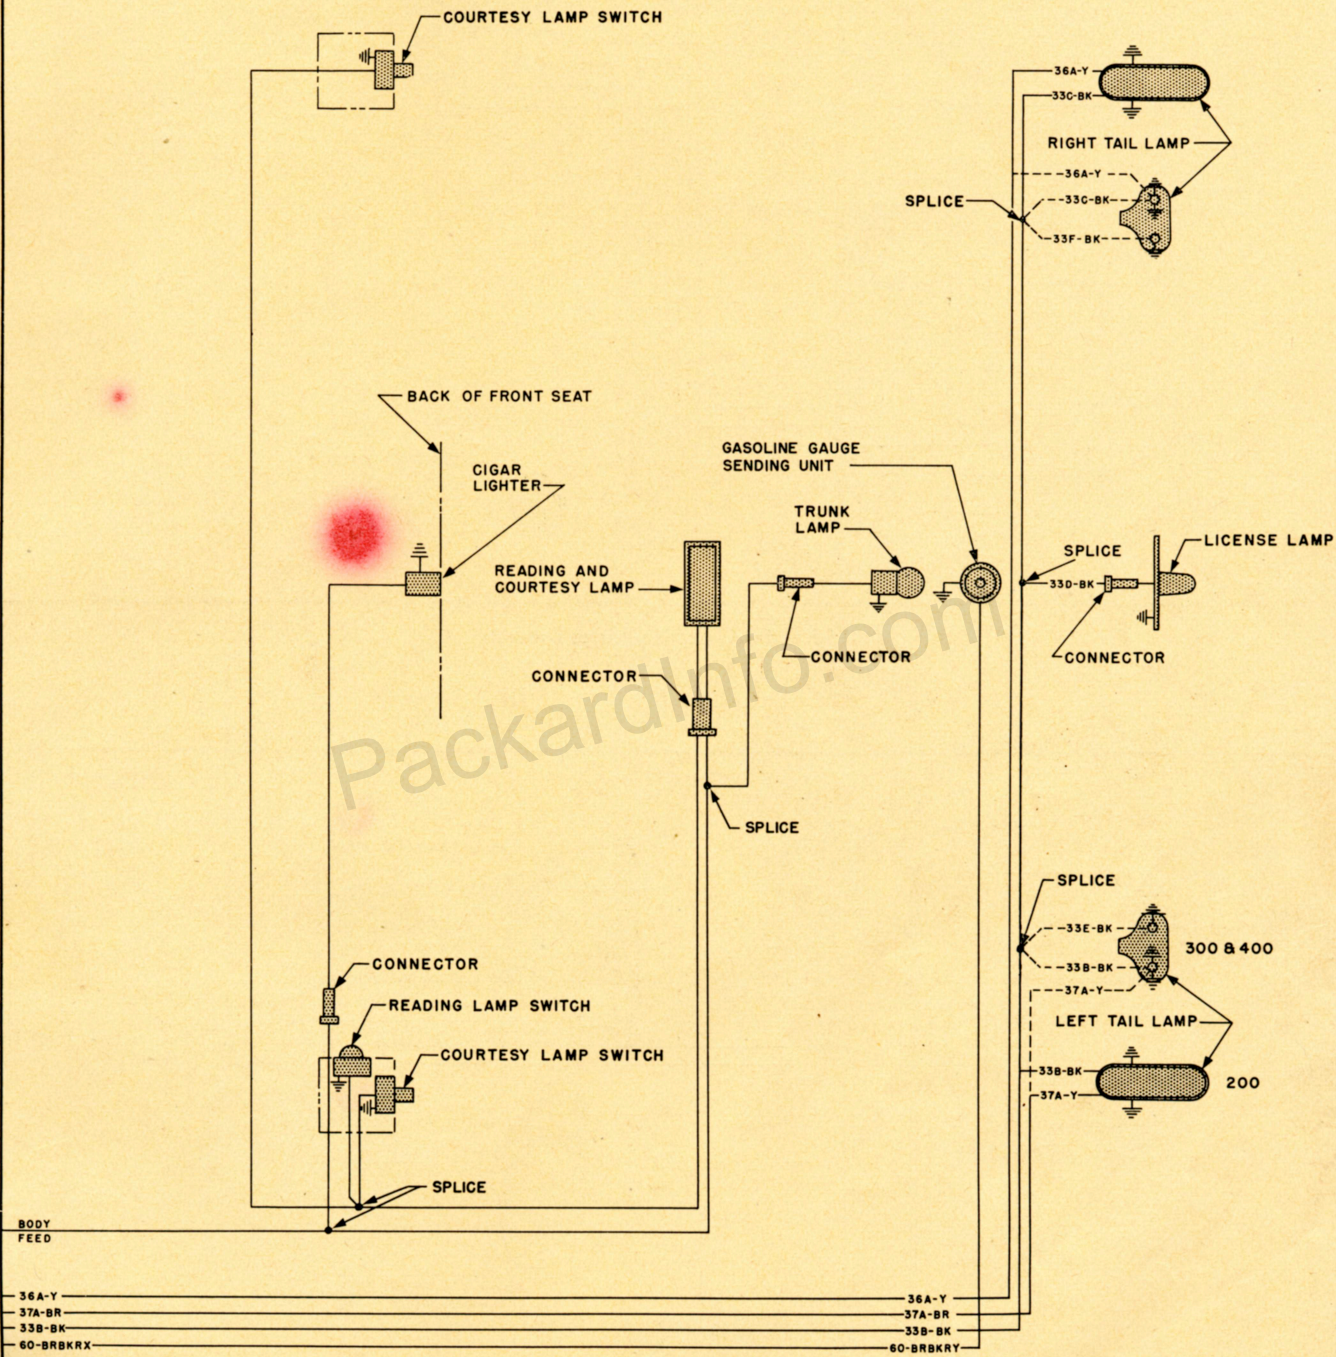


25th Series Rear Chassis and Body Wiring Diagram

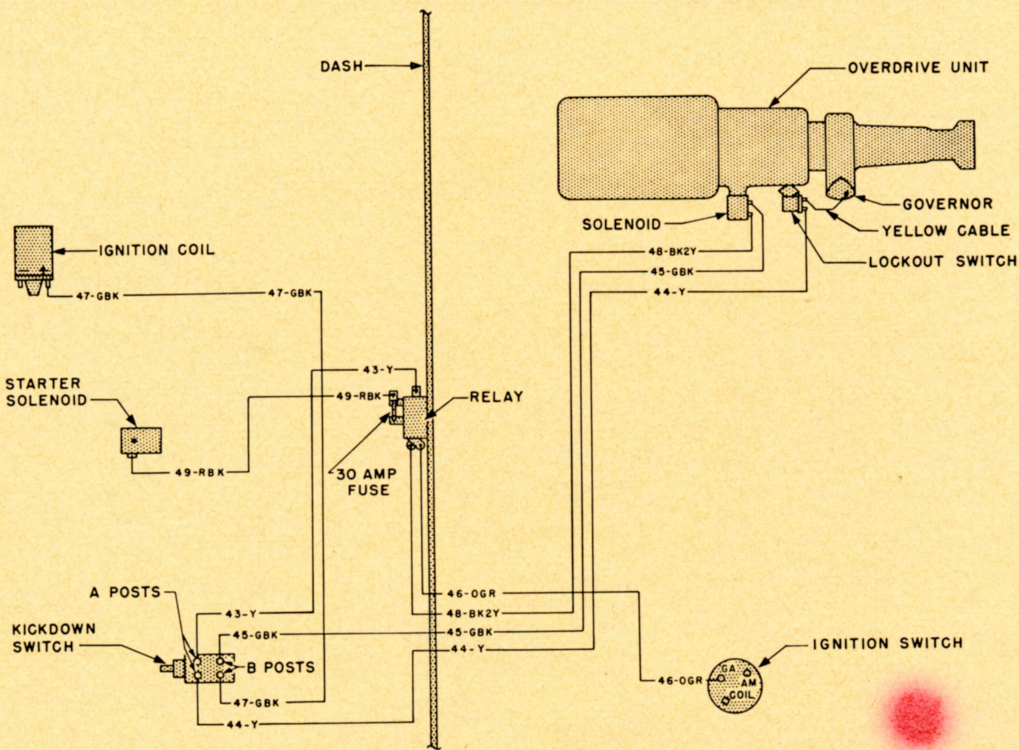

25th Series Overdrive Wiring Diagram

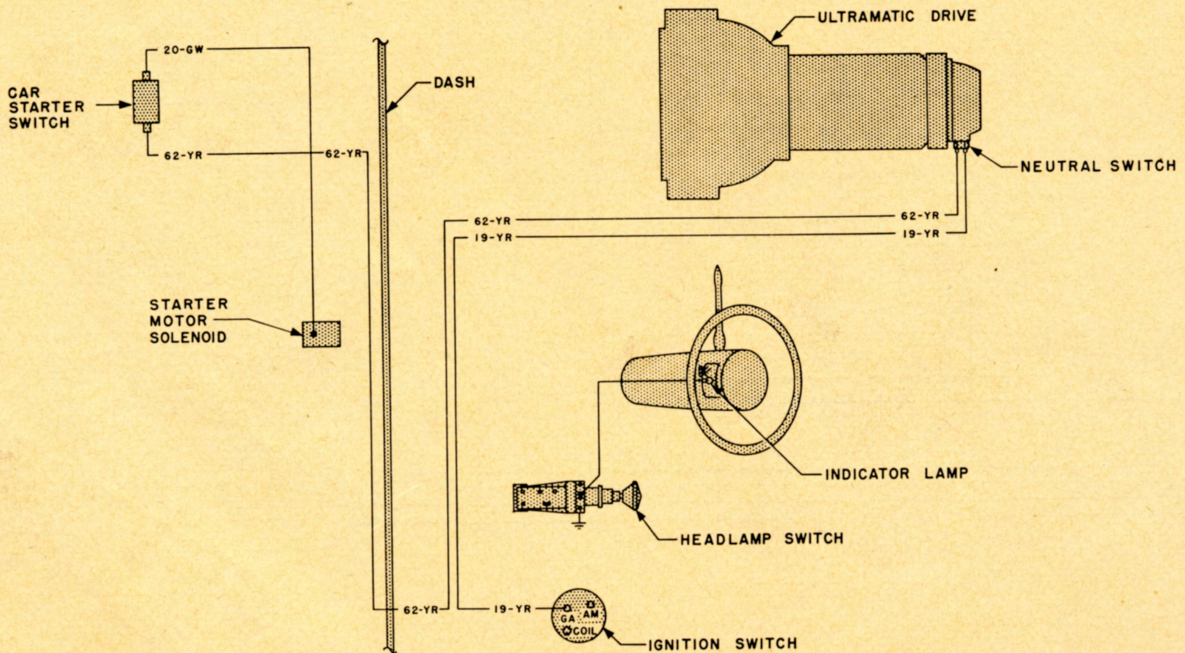

25th Series Ultramatic Drive Wiring Diagram

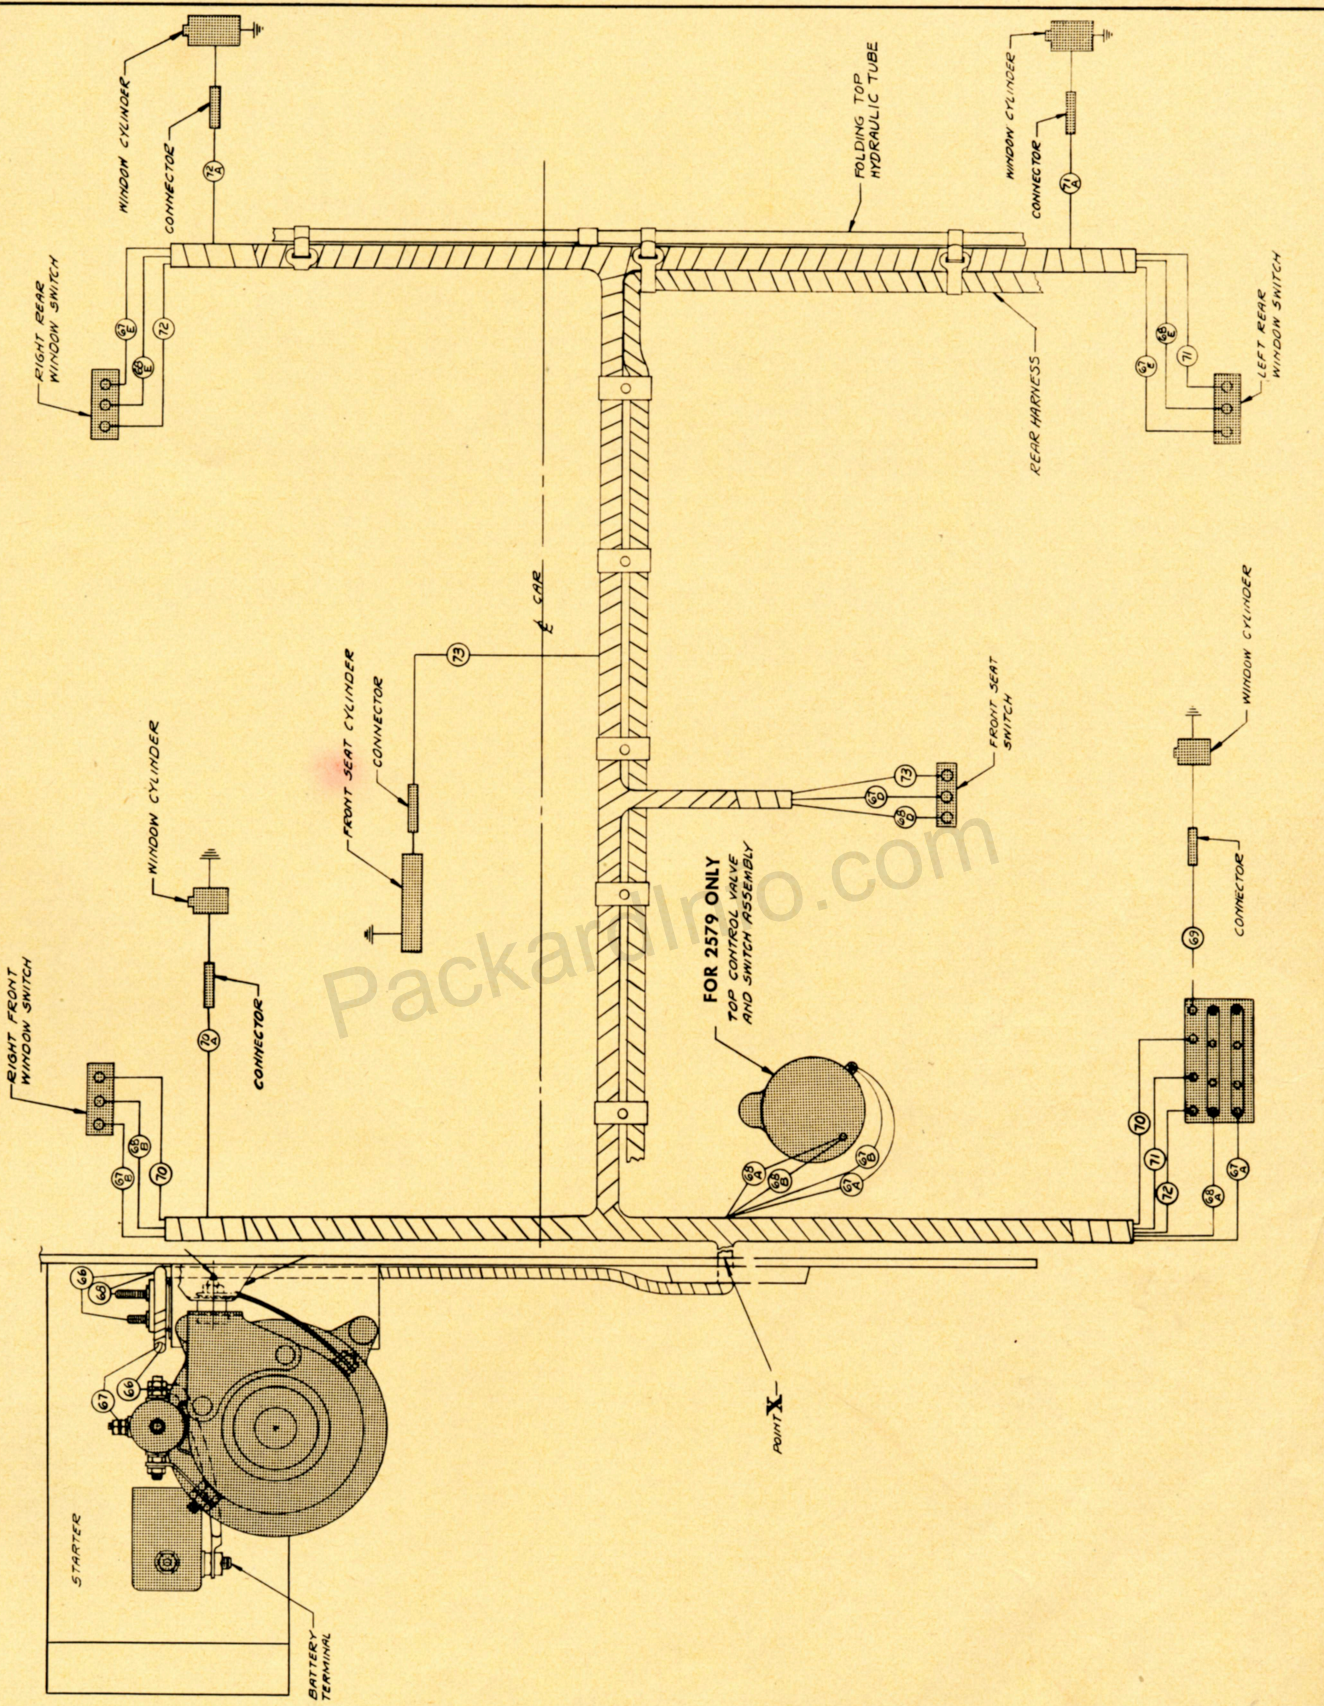

Electro-Hydraulic System Wiring Harness Layout (Models 2577 and 2579)

