



# Packard SERVICE TECHNICAL Bulletin

52T-29  
Dealer 22  
September 16, 1952

To: ZONES AND DEALERS

Subject: REMOVING CLOCKS

It has been reported that some dealers in removing faulty clocks for exchange or repairs are also removing the entire glass and bezel with the clock.

The George W. Berg Corporation sometimes receive clocks from dealers for repairs that include the glass and bezel. If these parts become damaged or lost they are unable to furnish new ones, since these parts are supplied by the King-Seeley Corporation.


It is extra work to remove the glass and bezel and it is not necessary to send in these parts to have a clock repaired.

The clocks can be removed by the following procedure:

- a. Remove reset knob retaining screw, pull off the reset knob and lockwasher.  
NOTE: Be careful to not lose the lockwasher which will be inside the knob.
- b. Fry off the notched sleeve which regulates the fast and slow adjustment. The sleeve can be pryed off with your finger nails, a knife blade or a small screw driver.
- c. Pull the light bulb and socket from the back of the clock.
- d. Remove the nut and disconnect the electrical wire from the clock.
- e. Remove the four clock attaching screws and remove the clock.

Reverse this procedure to install the clock.

Very truly yours,

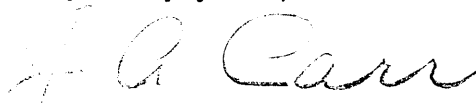

J. A. Carr  
General Service Manager

JAC:eb