

NO	GA	COLOR	LOCATION	NO	GA	COLOR	LOCATION
1	10	RED	FROM STARTER MOTOR SWITCH TO AMMETER	13	16	BLACK	FROM IGNITION SWITCH TO GASOLINE GAUGE
2	10	RED	FROM CURRENT REGULATOR TO GENERATOR	14	14	RED	FROM LIGHTING SW. TO LAMP FRONT RT. (CITY)
3	10	BLACK	FROM CURRENT REGULATOR TO AMMETER	15	14	WHITE	FROM DIMMER SW. TO LAMP FRONT LT. (CITY)
4	12	BLACK	FROM IGNITION SWITCH TO AMMETER	15	14	WHITE	FROM DIMMER SWITCH TO LIGHTING SWITCH
5	14	BLACK	FROM LIGHTING SWITCH TO DIMMER SWITCH	16	14	GREEN	FROM LIGHTING SW. TO LAMP FRONT RT. (PARKING)
6	14	YELLOW	FROM DIMMER SWITCH TO LAMP FT. LT. (PARKING)	17	16	BLACK WITH RED TRAC.	FROM LIGHTS SW. TO LAMP FT. RT. & LT. (PARKING)
7	14	YELLOW	FROM DIMMER SWITCH TO LIGHTING SWITCH	18	14	YELLOW	FROM IGNITION SW. TO CURRENT REGUL.
7A	16	BLACK	FROM STARTER BUTT TO STARTER MOT. SW.	20	16	BLACK	FROM STEERING POST HORN BUTT TO HORN BEL.
7B	12	BLACK	FROM STARTER BUTT TO IGNITION SWITCH	21	12	BLACK	FROM STARTER MOTOR SW. TO HORN RELAY
7C	12	BLACK	FROM STARTER BUTT TO LIGHTING SWITCH	24A	14	GREEN	FROM VOLTAGE REGULATOR TO GENERATOR
8	16	BLACK	FROM PANEL RHEOSTAT TO FUSE TO LIGHT SW.	24	16	BROWN	FROM VOLTAGE REGULATOR TO GENERATOR
8A	16	BLACK	FROM PANEL RHEOSTAT TO RR HARNESS JN.	25	18	WHITE	FROM LIGHTING SW. TO SPEEDOM. BRIGHT LIGHT IND.
8B	16	BLACK	FROM PANEL RHEOSTAT TO RR HARNESS JN.				
8C	16	BLACK	FROM RR HARNESS JN. TO REAR LAMPS				
9	16	GREEN	FROM FUSE AT LIGHTS SW. TO STOP LIGHT SW.				
9B	16	GREEN	FROM RR HARNESS JN. TO STOP LIGHT SW.				
9C	16	GREEN	FROM RR HARNESS JN. TO STOP LIGHT.				
11A	18	TAN WITH RED AND BLACK TRACER	FROM RR HARNESS JN. TO GAS. GAUGE				
11B	18	TAN WITH RED AND BLACK TRACER	FROM RR HARNESS JN. TO GAS TANK GAUGE				

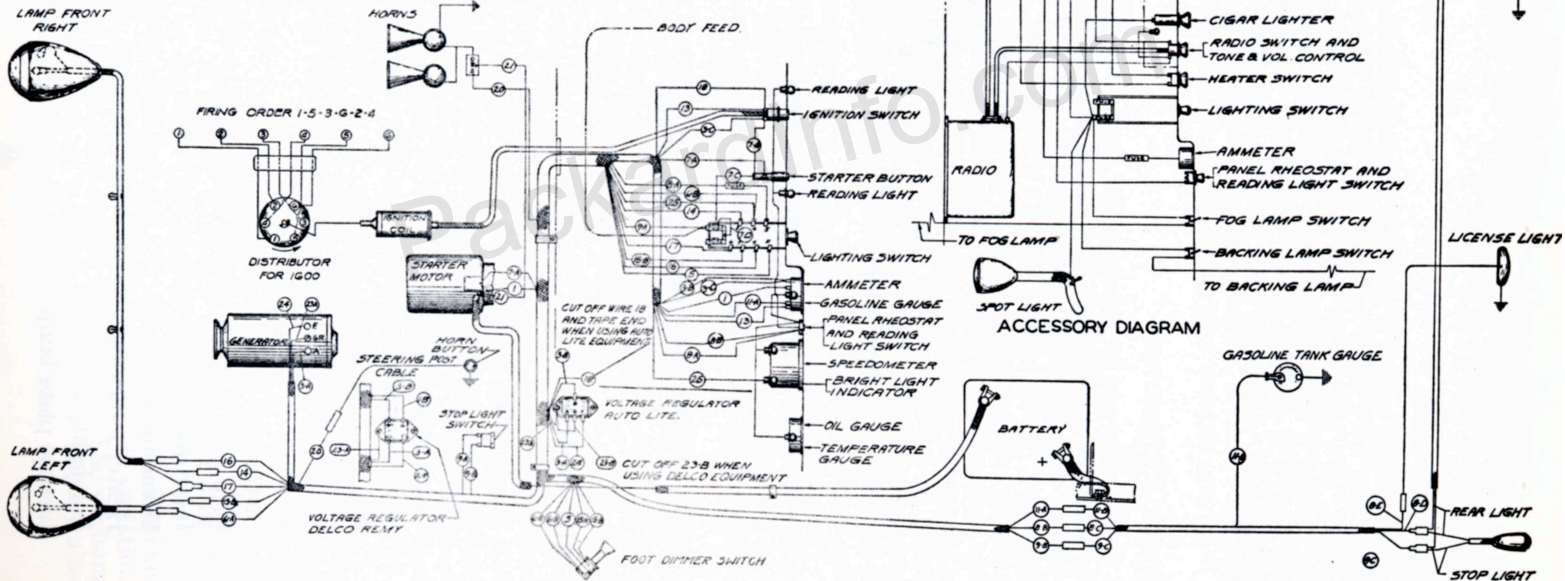


Fig. 22—Chassis Wiring Diagram. Does not Include Body Wiring

NO	GA	COLOR	LOCATION	NO	GA	COLOR	LOCATION
1	8	RED	FROM STARTER MOTOR SWITCH TO AMMETER.	25	14	GREEN	FROM HORN SWITCH TO BATTERY TO STOP LIGHT FUSE.
2	14	BLACK	— LIGHT SWITCH FUSE.	26	14	GREEN	— STOP LIGHT TO SPILCE B.
3	14	RED	— CURRENT REGULATOR TO GENERATOR.	27	14	GREEN	— REAR LIGHT JUNCTION TO STOP LIGHT REAR RIGHT
4	14	BLACK	— AMMETER.	28	14	GREEN	— STOP — FUSE TO SPILCE A.
5	14	BLACK	— LIGHTING SWITCH TO DIMMER SWITCH.	29	14	GREEN	— SWITCH TO —
6	14	WHITE	— DIMMER — LIGHTING.	30	14	GREEN	— REAR BATTERY AT —
7	14	BLACK	— STARTER BUTTON TO STARTER MOTOR SWITCH.	31	14	GREEN	— REAR BATTERY JUNCTION TO SPILCE A.
8	12	RED	— CIGAR LIGHTER TO CIGAR LIGHTER FEED.	32	14	RED	— BACKING LIGHT SWITCH TO SPILCE B.
9	14	BLACK	— STARTER BUTTON TO LIGHT SWITCH FEED.	33	14	BLACK	— REAR BATTERY JUNCTION TO SPILCE A.
10	14	BLACK	— REAR BATTERY JUNCTION TO GASOLINE GAUGE.	34	14	BLACK	— REAR BATTERY JUNCTION TO SPILCE C.
11	14	BLACK	— STARTER BUTTON TO LIGHT SWITCH FEED.	35	14	BLACK	— TAIL LIGHT TO SPILCE C.
12	14	BLACK	— STARTER BUTTON TO LIGHT SWITCH FEED.	36	14	BLACK	— JUNCTION TO LAMP REAR RIGHT.
13	14	GREEN	— LIGHTING SWITCH TO LAMP BURN EQUIPMENT BANK.	37	14	BROWN	— LIGHTING SWITCH TO CITY LIGHT INDICATOR.
14	14	YELLOW	— DIMMER — LIGHTING SWITCH.	38	14	BROWN	— LIGHTING SWITCH TO CITY LIGHT INDICATOR.
15	14	YELLOW	— DIMMER — LIGHTING SWITCH.	39	14	BROWN	— LIGHTING SWITCH TO CITY LIGHT INDICATOR.
16	14	BLACK	— LIGHTING — LAMP FRONT (PARK).	40	14	BROWN	— LIGHTING SWITCH TO CITY LIGHT INDICATOR.
17	14	RED	— LAMP — RIGHT (PARK).	41	14	BROWN	— LIGHTING SWITCH TO CITY LIGHT INDICATOR.
18	14	RED	— LAMP — RIGHT (PARK).	42	14	BROWN	— LIGHTING SWITCH TO CITY LIGHT INDICATOR.
19	14	RED	— LAMP — RIGHT (PARK).	43	14	BROWN	— LIGHTING SWITCH TO CITY LIGHT INDICATOR.
20	14	BROWN	— CURRENT REGULATOR TO GENERATOR.	44	14	BROWN	— LIGHTING SWITCH TO CITY LIGHT INDICATOR.
21	14	BLACK	— STARTER MOTOR SWITCH TO HORN RELAY.	45	14	BROWN	— LIGHTING SWITCH TO CITY LIGHT INDICATOR.
22	14	BLACK	— STARTER MOTOR SWITCH TO HORN RELAY.	46	14	BROWN	— LIGHTING SWITCH TO CITY LIGHT INDICATOR.
23	14	BLACK	— STARTER MOTOR SWITCH TO HORN RELAY.	47	14	BROWN	— LIGHTING SWITCH TO CITY LIGHT INDICATOR.
24	14	BLACK	— PANEL RHEOSTAT TO TAIL LIGHT FEED.	48	14	BROWN	— LIGHTING SWITCH TO CITY LIGHT INDICATOR.

