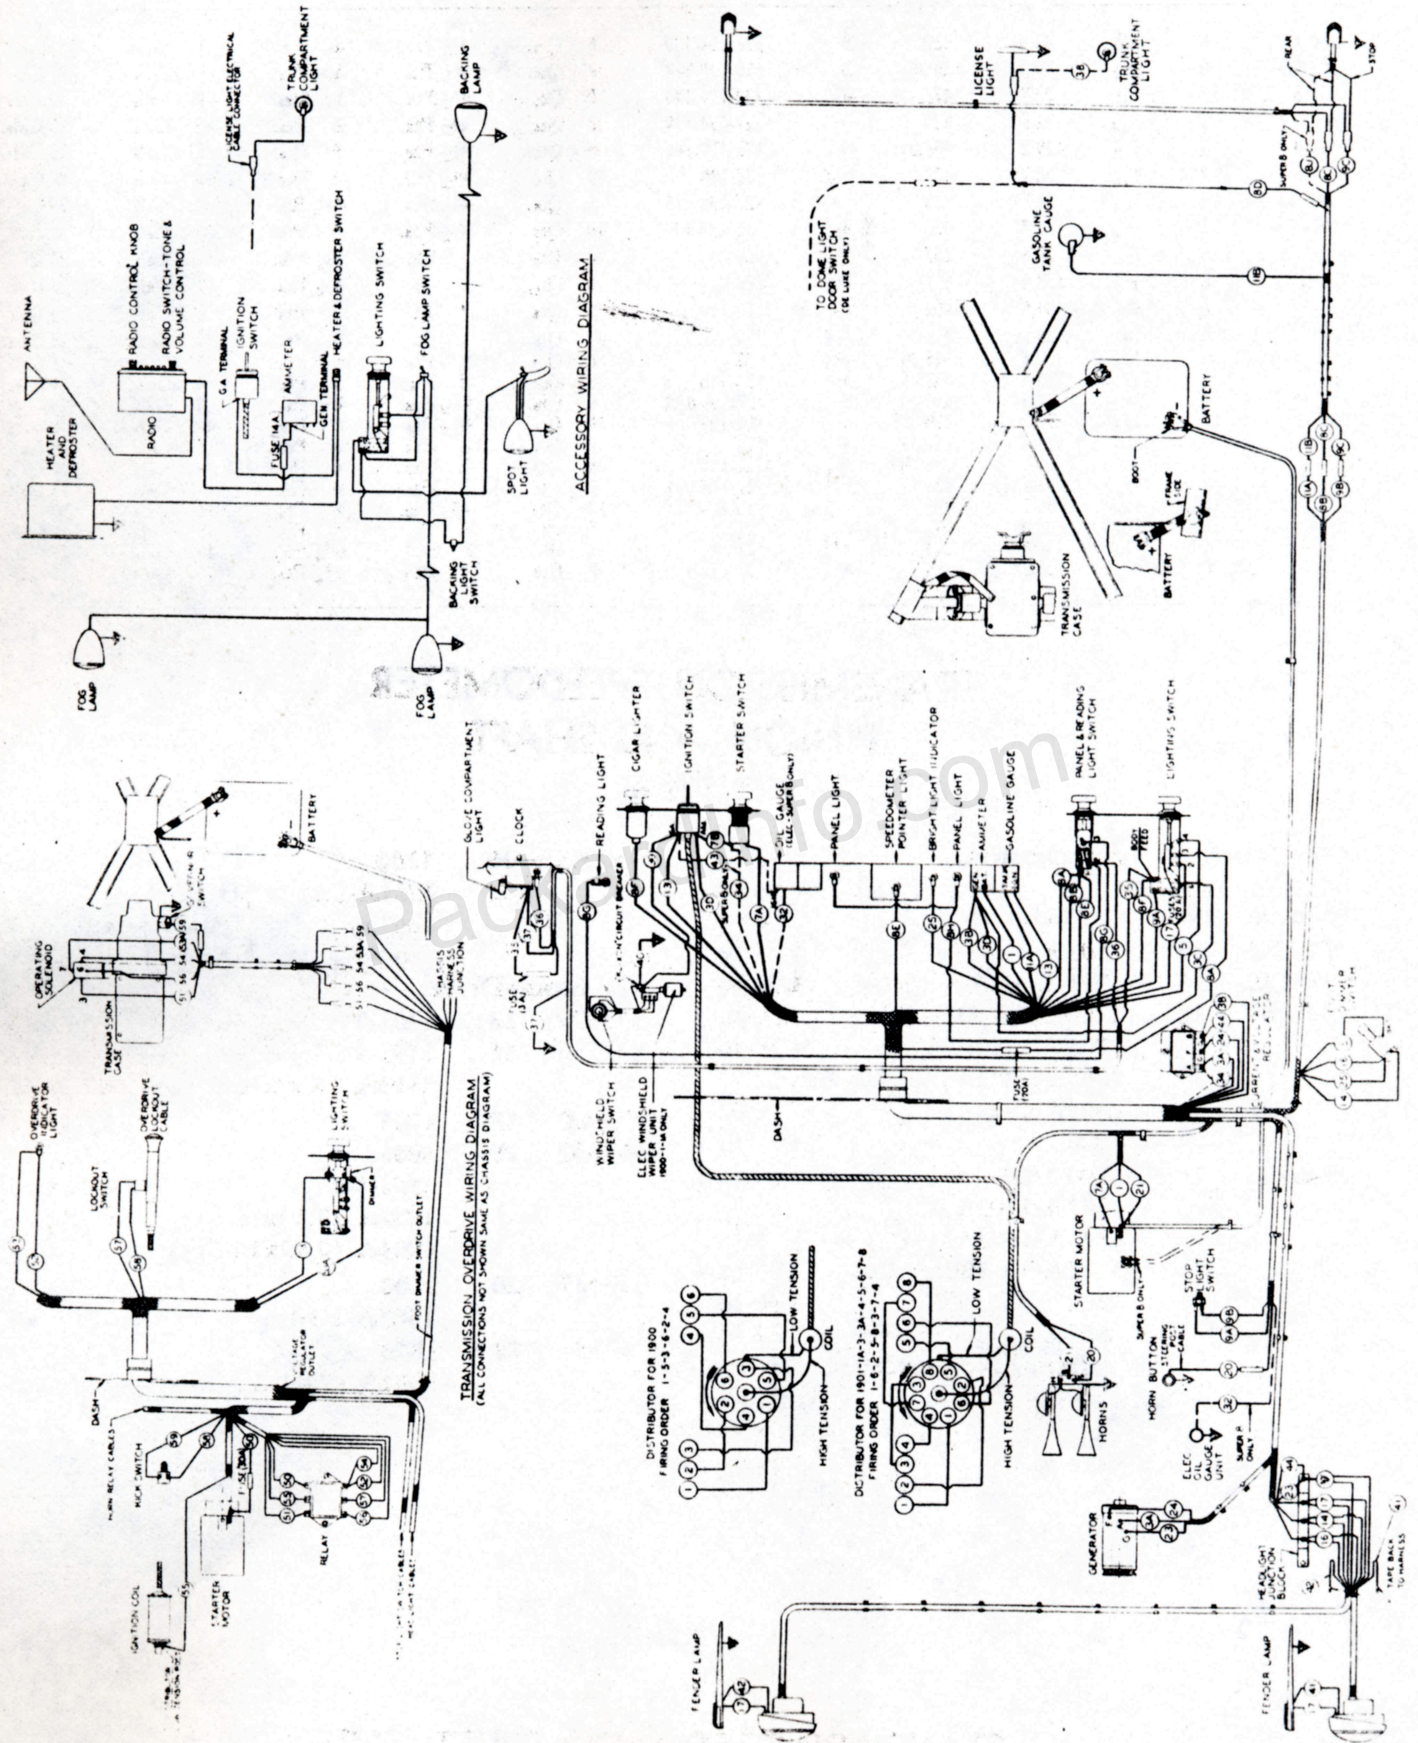


WIRING DIAGRAM



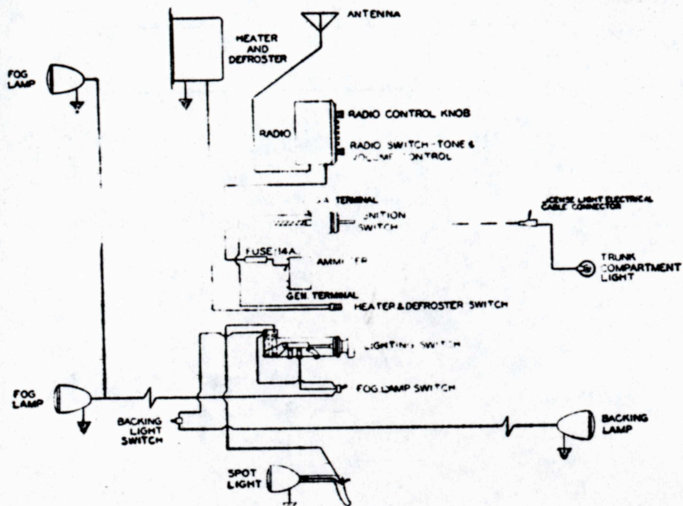


Fig. 27 Accessory Wiring Diagram

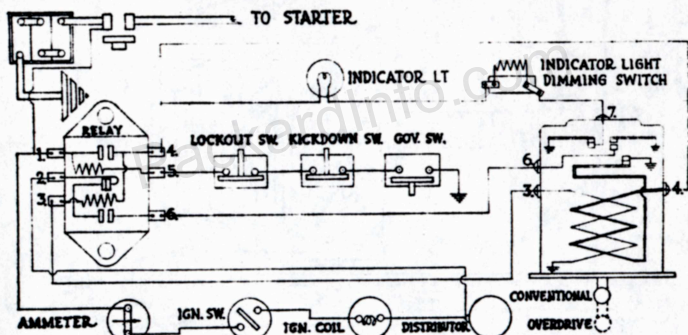


Fig. 28—Circuits of Aero-Drive Control Schematic

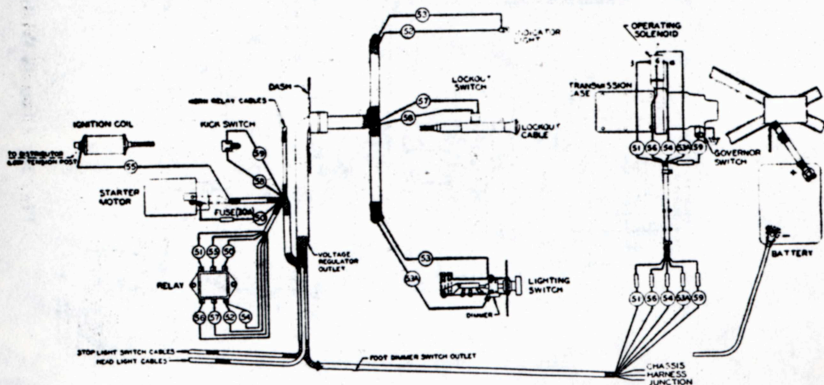


Fig. 29—Aero-Drive Wiring Diagram

NO.	GAUGE	COLOR	LOCATION
50	12	Black	From Starter Motor Switch to Relay Post No. 1
51	14	Yellow	From Relay Post No. 3 to Solenoid Post No. 3
52	18	Brown	From Relay Post No. 4 to Overdrive Indicator Light
53	18	Brown	From Lighting Switch to Overdrive Indicator Light
54	12	Black	From Relay Post No. 4 to Solenoid Post No. 4
55	16	Green	From Relay Post No. 2 to Ignition Coil—Low Tension Post
56	14	Green	From Relay Post No. 6 to Solenoid Post No. 6
57	16	Black with Red Tracer	From Relay Post No. 5 to Overdrive Lock-out Switch
58	16	Black with Red Tracer	From Kick Switch to Overdrive Lock-out Switch
59	16	Black with Red Tracer	From Kick Switch to Governor Switch
53A	18	Brown	From Lighting Switch to Solenoid Post No. 7

CHASSIS WIRING

NO.	GAUGE	COLOR	LOCATION
1	10	Red	From Starter Motor Switch to Ammeter
3A	10	Red	From Current Regulator to Generator
3B	10	Black	From Current Regulator to Ammeter
3C	12	Black	From Lighting Switch to Ammeter
3D	12	Black	From Ammeter to Ignition Switch
5	14	Black	From Lighting Switch to Foot Dimmer Switch
7A	16	Black	From Starter Switch to Starter Motor Switch
7B	16	Black	From Starter Switch to Ignition Switch (Not Used on Super 8)
8A	16	Black	From Lighting Switch to Panel Light Switch
8B	16	Black	From Panel Light Switch to Rear Harness Junction
8C	16	Black	From Rear Harness Junction to Rear Lights
8D	16	See Drawing	From Rear Harness to License Light
8E	16	Black	From Panel Light Switch to Speedometer Pointer Light
8F	14	Yellow	From Cigar Lighter to Lighting Switch
8G	16	Black	From Panel Light Switch to Reading Lights
8H	16	Black	From Panel Light Switch to Panel Lights
8J	16	Black	From Splice at 8C to Rear Lights (Upper)
9A	16	Green	From Fuse at Lighting Switch to Stop Light Switch
9B	16	Green	From Stop Light Switch to Rear Harness Junction
9C	16	Green	From Rear Harness Junction to Stop Lights
11A	18	Tan with Black and Red Tracers	From Gasoline Gauge to Rear Harness Junction
11B	18		From Rear Harness Junction to Gasoline Tank Gauge
13	16	Black	From Ignition Switch to Gasoline Gauge
14	14	Red	From Foot Dimmer Switch to Junction Block and Headlamps (City)
16	14	Green	From Foot Dimmer Switch to Junction Block and Headlamps (Drive)
17	16	Black with Red Tracer	From Lighting Switch to Junction Block to Lamp Junction and Fender Lamps
20	16	Brown	From Steering Post Horn Button to Horn Relay
21	12	Black	From Starter Motor Switch to Horn Relay
23	14	Black	From Generator to Headlamp Junction Block
24	18	Brown	From Current Regulator to Generator
25	18	White	From Foot Dimmer Switch to Speedometer Bright Light Indicator
32	16	Yellow with Black Tracer	From Electric Oil Gauge (Panel) to Electric Oil Gauge Unit (Motor) (Super 8 Only)
34	16	Black	From Current Regulator to Starter Switch (Super 8 Only)
35	18	Red	From Lighting Switch to Fuse at Clock
36	18	Black	From Clock to Panel Light Switch
37	18	White	From Clock to Glove Compartment Door Hinge Screw
38	16	Black	From Rear Compartment Light to License Light Electric Cable Connector
39	16	Red	From Electric Windshield Wiper Unit to Ignition Switch
40	16	Green	From Electric Windshield Wiper Unit to Ignition Switch Mounting Screw
41	16	Yellow	From Fender Lamp Left to Lamp Junction Block
42	16	Yellow	From Fender Lamp Right to Lamp Junction Block
43	16	Black	From Ignition Switch to Electric Oil Gauge (Super 8 Only)
44	14	Black	From Current Regulator to Headlight Junction Block