

# ELECTRICAL WIRING DIAGRAM

## CABLE CODE AND IDENTIFICATION CODE


NO.	GA.	COLOR	LOCATION	NO.	GA.	COLOR	LOCATION
1	10	Red	Starter Motor to Voltage Regulator	49	12	Red—Black Tcr.	Starter Solenoid To Overdrive Relay
2	10	Red—Green Tcr.	Starter Mtr. To 30 Amp. Circuit Breaker	51	14	Black	Left Horn To Right Horn
3	10	Red—Black Tcr.	Generator To Voltage Regulator	51A	14	Black	Left Horn To Horn Relay
4	14	Black	Hdhp. Junc. Block To Volt. Reg. Ground	52A	18	White—Red X Tcr.	Dir. Signal Ind. Lamp Left To Splice No. 7
4A	14	Black	Gen. Ground To Hdhp. Junc. Block	52B	18	White—Red X Tcr.	Dir. Sig. Ind. Lamp Right To Splice No. 7
4B	14	Black	Left Junc. Block To Right Junc. Block	53	18	Orange	Dir. Sig. Ind. Lamp Left To Splice No. 8
5	16	White—Black Tcr.	Generator Field to Volt. Regulator Field	54	18	White	Dir. Sig. Ind. Lamp Right To Splice No. 9
6	16	Blue	Hdhp. Switch To Hdhp. Junc. Block	60	18	Brown—Blk.—Red X Tcr.	Fuel Gage Sending Unit To Fuel Gage
6A	16	Blue	Left Junc. Block To Right Junc. Block	62	16	Green—White Tcr.	Car Starter Switch To Starter Solenoid
7	14	Brown	Foot Dim. Switch To Hdhp. Junc. Block				
7A	14	Brown	Left Junc. Block To Right Junc. Block				
8	14	Green	Foot Dim. Switch To Hdhp. Junc. Block				
8A	14	Green	Left Junc. Block To Right Junc. Block				
9	12	Red	Starter Motor To Horn Relay				
10	16	Black—2 Red Tcrs.	Horn Button Cable To Horn Relay				
11	16	Blue—2 Yellow Tcrs.	Temp. Sending Unit To Temp. Gage				
12	14	Black	Blower Switch To Heater Blower Conn.				
13	14	Red	Stop Lamp Sw. To 30 Amp. Circ. Breaker				
15	14	White—Green X Tcr.	Headlamp Switch To Foot Dimmer Switch				
16	18	Green—Black Tcr.	Ft. Dimmer Sw. To High Beam Ind. Lamp				
17	14	Yellow	Ignition Switch To Ignition Coil				
18	16	Brown—White Tcr.	Oil Sw. Unit To Oil Pressure Ind. Lamp				
19	16	Yellow—Red Tcr.	Ignition Switch To Car Starter Switch				
19A	16	Yellow—Red Tcr.	Ign. Sw. To Trans. Neutral Sw. (Ultra.)				
19B	16	Yellow—Red Tcr.	Trs. Neutral Sw. To Car Strtr. Sw. (Ultra.)				
21	12	Red—2 White Tcrs.	Ignition Switch To Splice No. 6				
22	14	Black—Blue Tcr.	Ignition Sw. To 10 Amp. Circuit Breaker				
23	16	Black—Green Tcr.	Courtesy Lamp To Splice No. 5				
23A	16	Black—Green Tcr.	Automatic Door Switch To Splice No. 4				
23B	16	Black—Green Tcr.	Automatic Door Switch To Splice No. 5				
23C	16	Black—Green Tcr.	Map Lamp Switch To Splice No. 4				
23D	16	Black—Green Tcr.	Splice No. 4 To Splice No. 5				
23E	16	Black—Green Tcr.	Courtesy Lamp To Splice No. 4				
24	16	White—Black Tcr.	Courtesy Lamp To Splice No. 3				
24A	16	White—Black Tcr.	30 Amp. Circuit Breaker To Splice No. 3				
24B	16	White—Black Tcr.	Courtesy Lamp To Splice No. 3				
25	16	Black—Blue Tcr.	Ignition Switch To Splice No. 2				
25A	16	Black—Blue Tcr.	Splice No. 2 To Oil Pressure Ind. Lamp				
25B	16	Black—Blue Tcr.	Splice No. 2 To Bat. Discharge Ind. Lamp				
27	18	White—Red X Tcr.	Direction Signal Flasher To Splice No. 7				
28	16	Red	10 Amp. Cir. Breaker To Dir. Sig. Flasher				
29	16	Red	10 Amp. Cir. Bkr. To Instr. Volt. Reg.				
30	14	Black	Rheostat To Splice No. 1				
30A	18	Black	Inst. Cluster Socket To Splice No. 1				
30B	18	Black	Inst. Cluster Socket To Splice No. 1				
30C	18	Black	Inst. Cluster Socket To Splice No. 1				
30D	18	Black	Inst. Cluster Socket To Splice No. 1				
31	16	Black—Orange Tcr.	Volt. Reg. To Bat. Discharge Ind. Lamp				
32	16	Black	Headlamp Switch To Rheostat				
33B	16	Black	Headlamp Switch To Left Tail Lamp				
33C	16	Black	Right Tail Lamp To Splice				
33D	16	Black	License Lamp To Splice				
33E	16	Black	Left Tail Lamp To Splice				
33F	16	Black	Right Tail Lamp To Splice				
34	16	Orange	Dir. Sig. Sw. Plug To Left F. Cable Con.				
34A	16	Orange	Left F. Cable Con. To Right F. Cable Con.				
35	16	White	Dir. Sig. Sw. Plug To Left F. Cable Con.				
36	16	Yellow	Dir. Sig. Sw. Plug To Inst. Board Con.				
36A	16	Yellow	Front Harness Con. To Right Stop Lamp				
37	16	Brown	Dir. Sig. Sw. Plug To Inst. Board Con.				
37A	16	Brown	Front Harness Con. To Left Stop Lamp				
38	14	Green	Dir. Sig. Sw. Plug To Stop Lamp Sw.				
39	16	Blue	Dir. Signal Switch Plug To Flasher Unit				
40	16	Green	Hdhp. Switch To Ign. Switch Lamp				
41	12	Red	Hdhp. Circuit Breaker To Splice No. 6				
42	16	Green	Lamp Backing Junction Front To Splice				
42A	16	Green	Lamp Backing Junc. Rear Left To Splice				
42B	16	Green	Lamp Backing Junc. Rear Right To Splice				
42C	16	Green	Lamp Bkg. Junc. Front To Bkg. Switch				
42D	16	Green	Lamp Bkg. Sw. To 10 Amp. Cir. Bkr. F. P.				
43	16	Yellow	Kick Switch To Overdrive Relay				
44	16	Yellow	Kick Switch To Lockout Switch				
45	16	Green—Black Tcr.	Kick Switch To Overdrive Solenoid				
46	16	Orange—Green Tcr.	Ignition Switch To Overdrive Relay				
47	16	Green—Black Tcr.	Kick Switch To Ignition Coil				
48	12	Black—2 Yellow Tcrs.	Overdrive Relay To Overdrive Solenoid				


NO.	GA.	COLOR	MODELS 4-DOOR
66	14	Red	Pump To Circuit Breaker
67	14	Green	Pump To Splice No. 1
67B	14	Green	Splice No. 1 To Right Front Window Sw.
67C	14	Green	Splice No. 1 To Splice No. 3
67D	14	Green	Splice No. 3 To Front Seat Switch
67E	14	Green	Splice No. 3 To Left Rear Window Sw.
67F	14	Green	Splice No. 1 To Master Switch
67G	14	Green	Circuit No. 3 To Right Rear Window Sw.
68	14	Red	Circuit Breaker To Splice No. 2
68A	14	Red	Splice No. 2 To Master Switch
68C	14	Red	Splice No. 2 To Splice No. 4
68D	14	Red	Splice No. 4 To Front Seat Switch
68E	14	Red	Splice No. 4 To Left Rear Window Switch
68F	14	Red	Splice No. 4 To Right Rear Window Sw.
68G	14	Red	Splice No. 2 To Right Front Window Sw.
69	14	Yellow—Green Tcr.	Master Sw. To Left Front Window Cyl.
70	14	Yellow—Red Tcr.	Splice No. 5 To Right Front Window Sw.
70A	14	Yellow—Red Tcr.	Splice No. 5 To Right Front Window Cyl.
70B	14	Yellow—Red Tcr.	Splice No. 5 To Master Switch
71	14	Yellow	Master Switch To Splice No. 6
71A	14	Yellow	Splice No. 6 To Left Rear Window Cyl.
71B	14	Yellow	Splice No. 6 To Left Rear Window Switch
72	14	Yellow—Black Tcr.	Splice No. 7 To Master Switch
72A	14	Yellow—Black Tcr.	Splice No. 7 To Right Rear Window Cyl.
72B	14	Yellow—Black Tcr.	Splice No. 7 To Right Rear Window Sw.
73	14	Yellow	Front Seat Switch To Front Seat Cylinder
74	6	Black	Pump To Starter Motor


NO.	GA.	COLOR	2679-2677
66	14	Red	Pump To Circuit Breaker
67	14	Green	Pump To Splice No. 1
67A	14	Green	Spl. No. 1 To Top Con. Val. (2469-2579)
67B	14	Green	Splice No. 1 To Right Front Window Sw.
67C	14	Green	Splice No. 1 To Splice No. 3
67D	14	Green	Splice No. 3 To Seat Switch
67E	14	Green	Left Qtr. Window Switch To Splice No. 3
67F	14	Green	Master Switch To Splice No. 1
67G	14	Green	Right Qtr. Window Sw. To Splice No. 3
68	14	Red	Circuit Breaker To Splice No. 2
68A	14	Red	Master Switch To Splice No. 2
68B	14	Red	Top Con. Val. To Spl. No. 2 (2469-2579)
68C	14	Red	Splice No. 2 To Splice No. 4
68D	14	Red	Splice No. 4 To Seat Switch
68E	14	Red	Left Qtr. Window Sw. To Splice No. 4
68F	14	Red	Right Rr. Qtr. Window Sw. To Spl. No. 4
68G	14	Red	Right Front Window Sw. To Splice No. 2
69	14	Yellow—Green Tcr.	Master Sw. To Left Front Window Cyl.
70	14	Yellow—Red Tcr.	Splice No. 5 To Right Front Window Sw.
70A	14	Yellow—Red Tcr.	Splice No. 5 To Right Front Window Cyl.
70B	14	Yellow—Red Tcr.	Master Switch To Splice No. 5
71	14	Yellow	Master Switch To Splice No. 6
71A	14	Yellow	Left Qtr. Window Cyl. To Splice No. 6
71B	14	Yellow	Left Qtr. Window Sw. To Splice No. 6
72	14	Yellow—Black Tcr.	Master Switch To Splice No. 7
72A	14	Yellow—Black Tcr.	Right Qtr. Window Cyl. To Splice No. 7
72B	14	Yellow—Black Tcr.	Right Qtr. Window Sw. To Splice No. 7
73	14	Yellow	Front Seat Sw. To Front Seat Cylinder
74	6	Black	Pump To Starter Motor



26th Series Engine Compartment Wiring Diagram

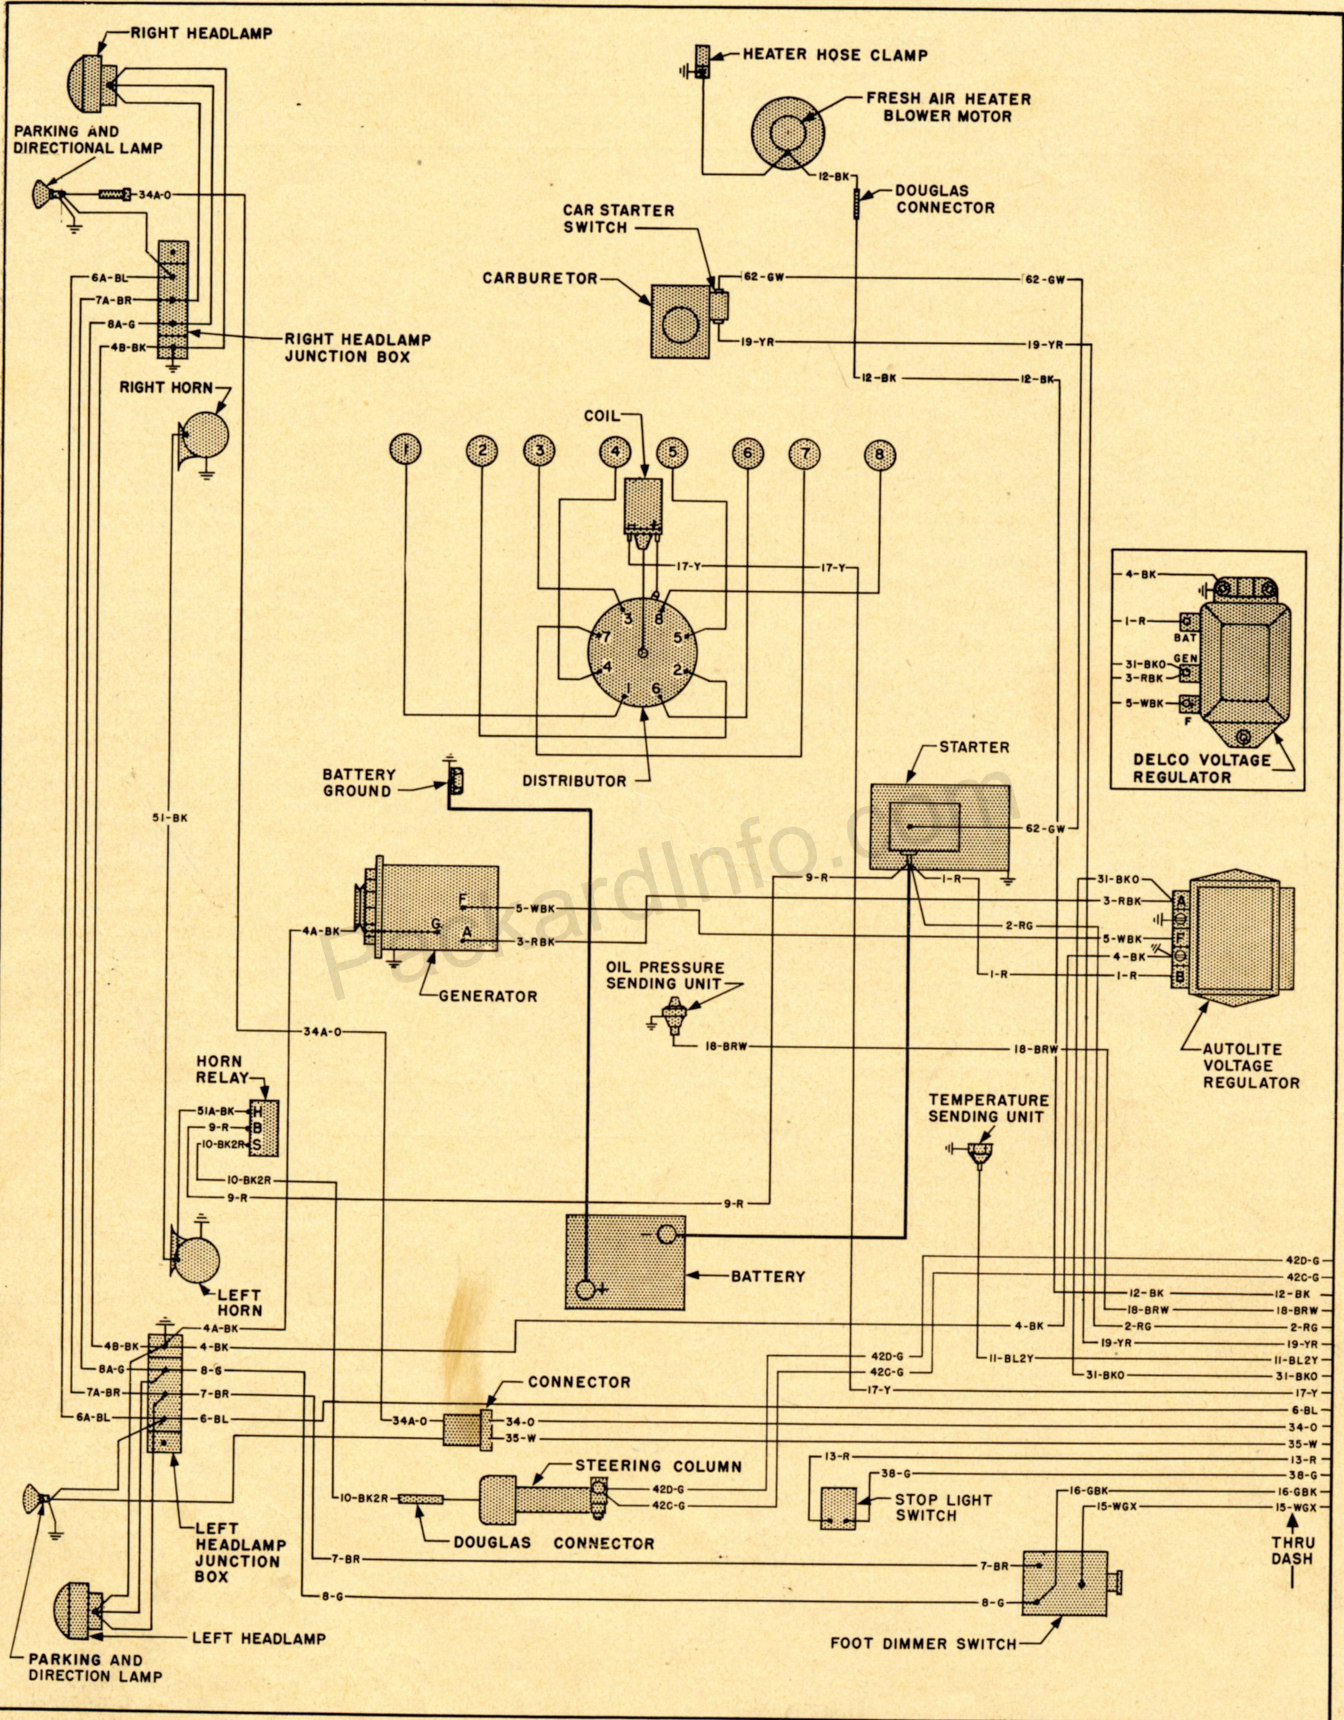

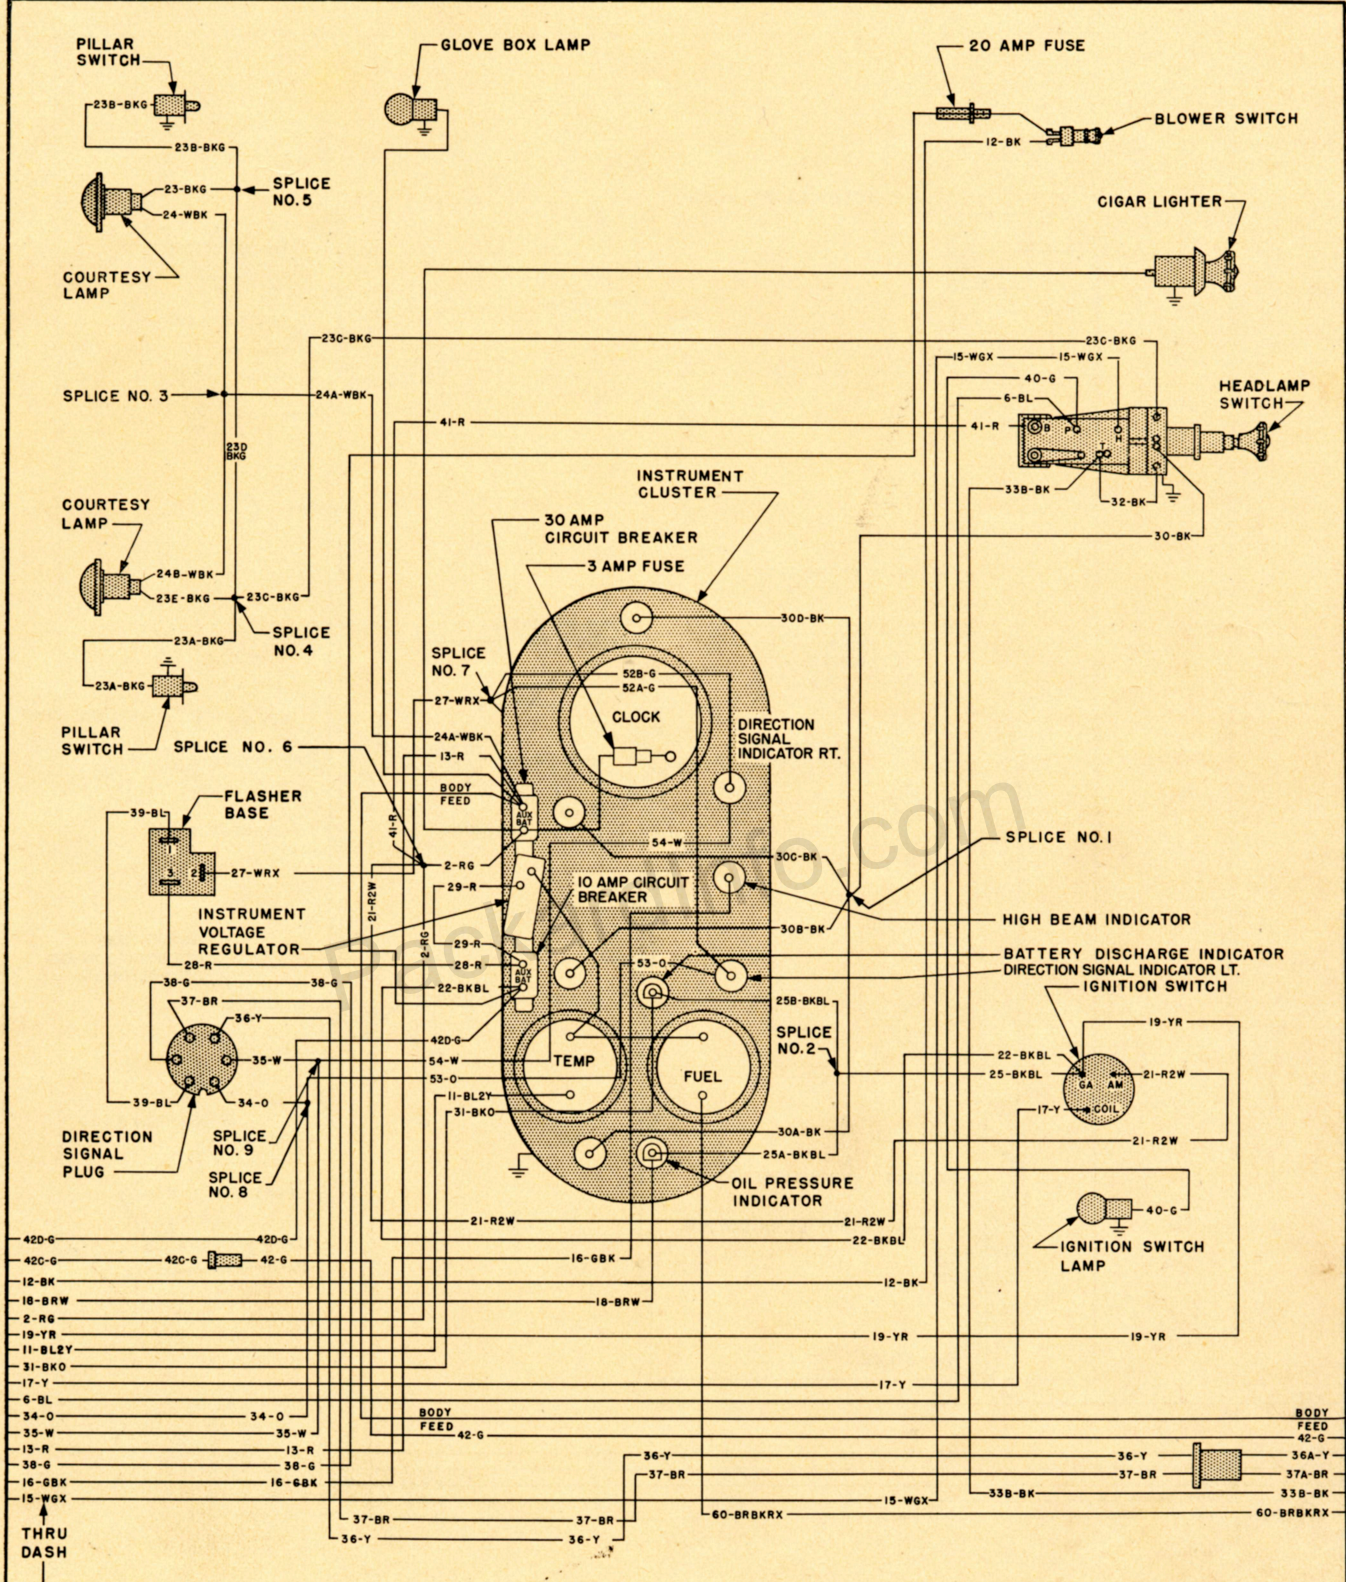26th Series Driver's Compartment Wiring Diagram

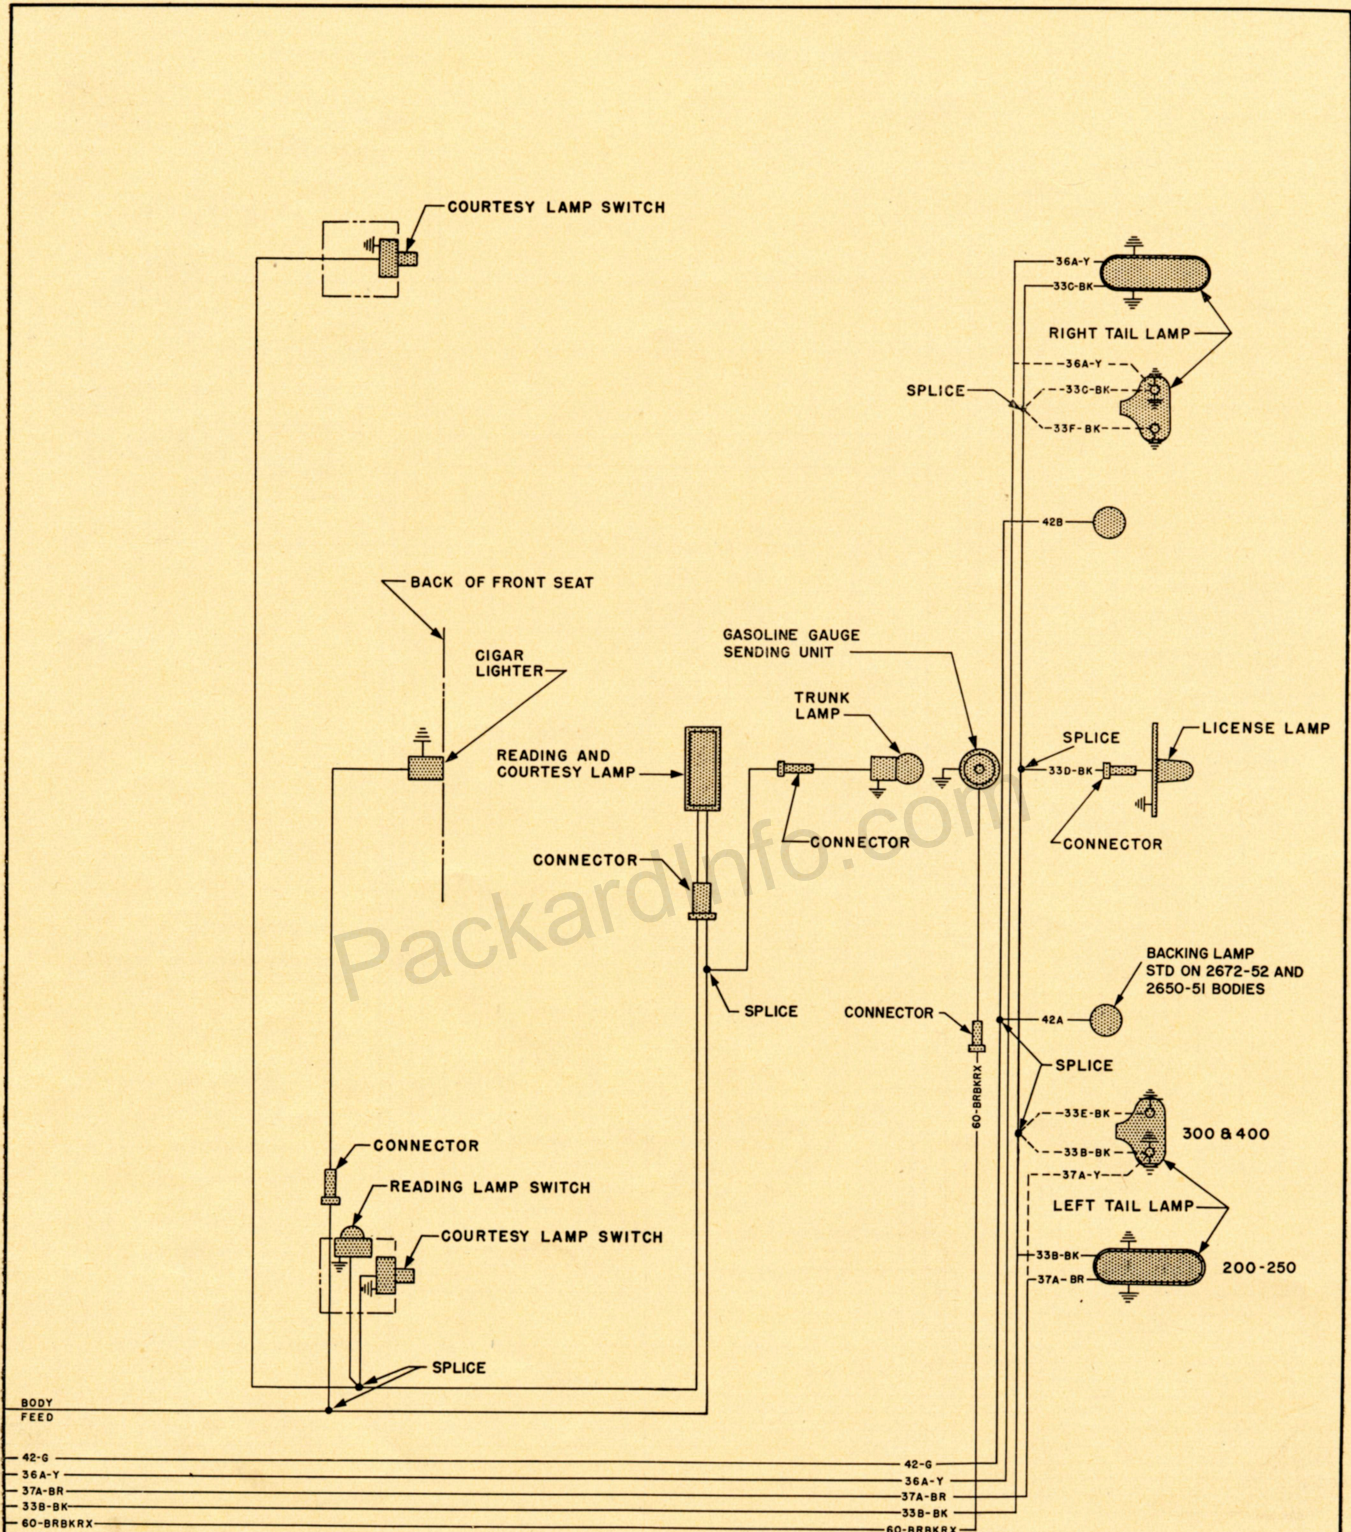


BODY FEED


- 42-G
- 36A-Y
- 37A-BR
- 33B-BK
- 60-BRBKRX

- 42-G
- 36A-Y
- 37A-BR
- 33B-BK
- 60-BRBKRX


26th Series Rear Chassis and Body Wiring Diagram

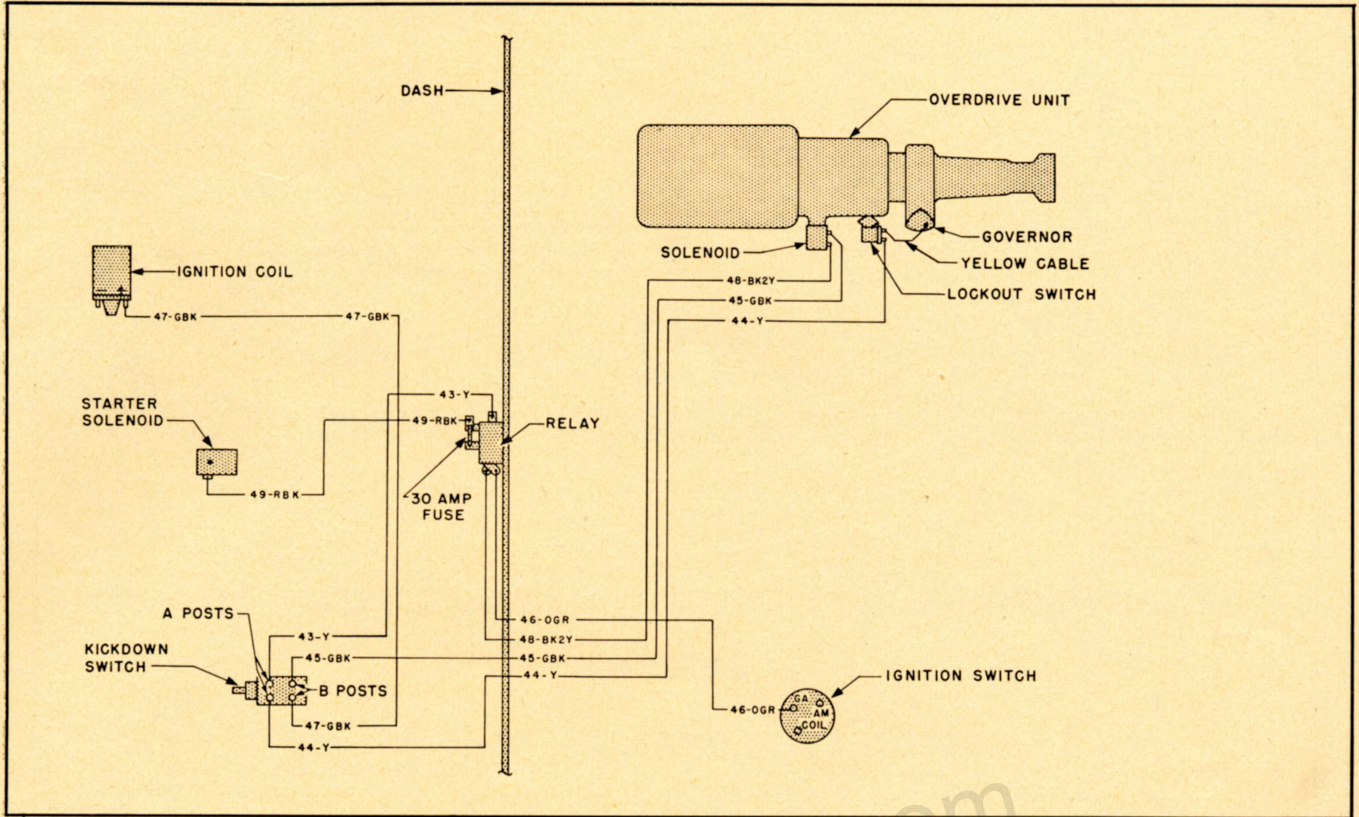

26th Series Overdrive Wiring Diagram

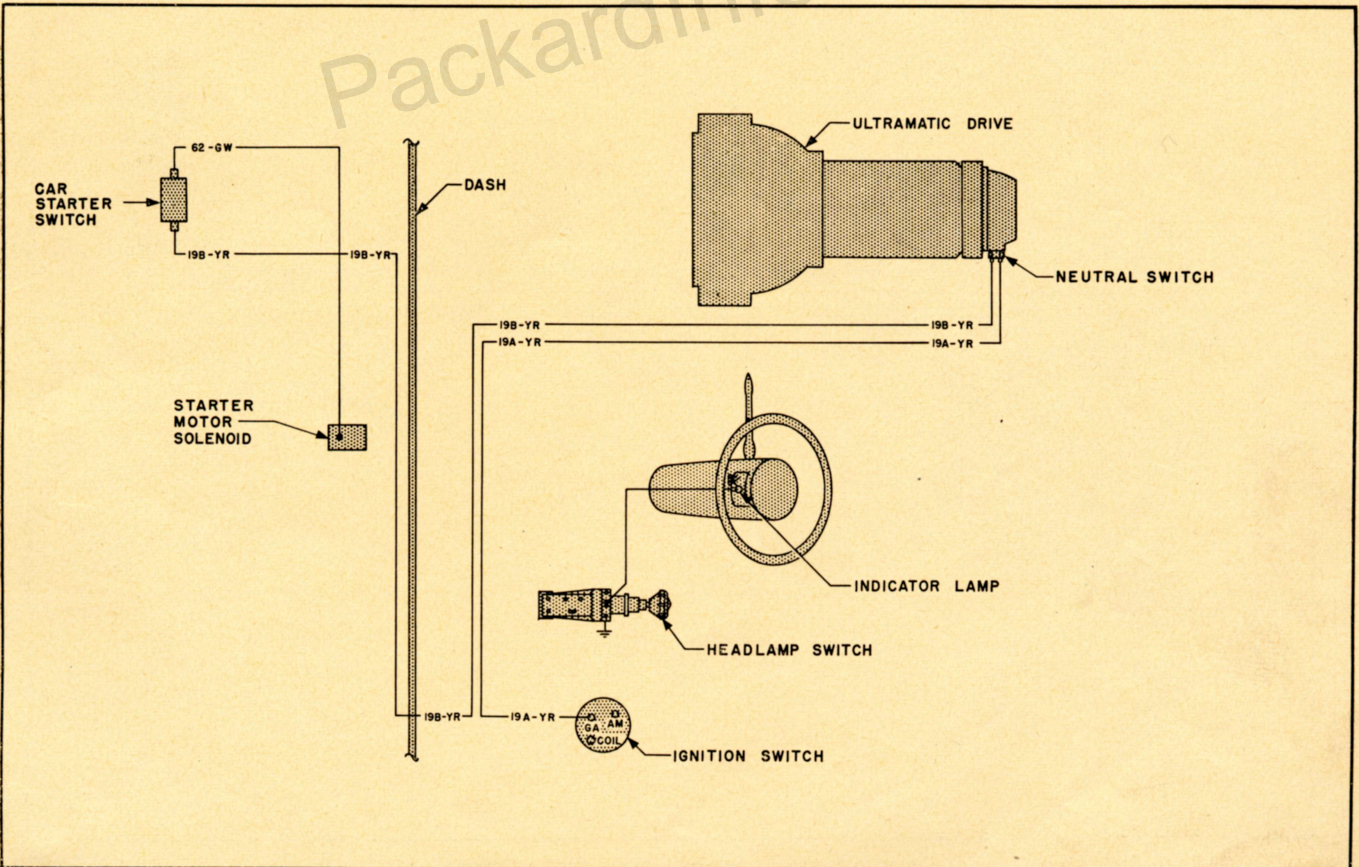


26th Series Ultramatic Drive Wiring Diagram

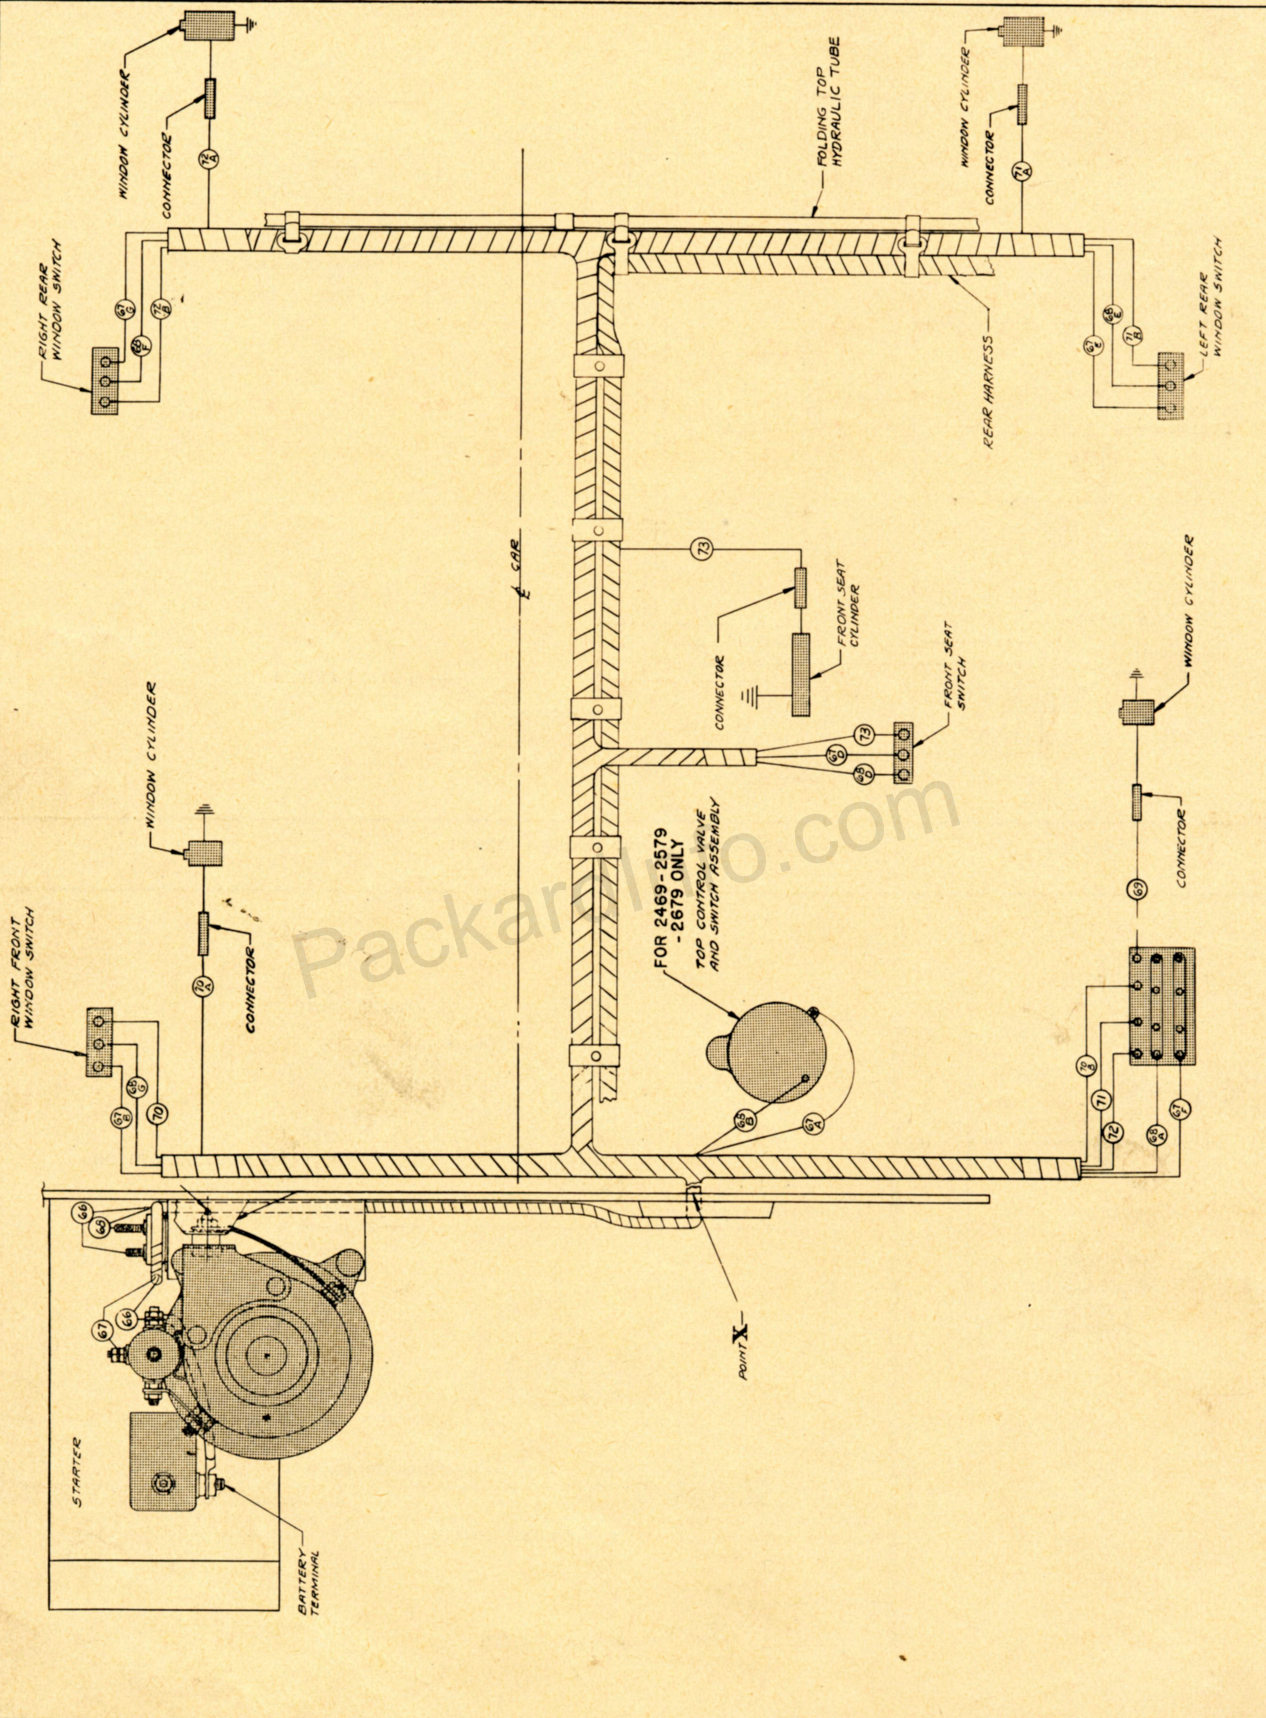


Electro-Hydraulic System Wiring Harness Layout (Models 2577, 2579 and 2679)

NO.	DESCRIPTION	GA.	COLOR
1	BODY FEED CABLE	12	RED WITH WHITE TRACER
1-A	BODY FEED TO SPOT LAMP CABLE	16	RED WITH WHITE TRACER
1-B	BODY FEED TO COURTESY LAMP CONNECTOR CABLE	16	RED WITH WHITE TRACER
1-C	BODY FEED TO CIGAR LIGHTER LEFT CABLE	12	RED WITH WHITE TRACER
1-D	BODY FEED TO TRUNK LAMP CONNECTOR CABLE	16	RED WITH WHITE TRACER
1-E	BODY FEED TO READING LAMP CONNECTOR CABLE	16	RED WITH WHITE TRACER
2	DOOR PILLAR SWITCH TO COURTESY LAMP	16	BLACK
3	COURTESY LAMP LEFT TO COURTESY LAMP RIGHT FEED CABLE	16	RED WITH WHITE TRACER
4	COURTESY LAMP LEFT TO COURTESY LAMP RIGHT GROUND CABLE	16	BLACK
5	SPOT LAMP TO SWITCH CABLE	16	BLACK
6	READING LAMP TO MANUAL SWITCH CABLE	16	BLACK
7	CIGAR LIGHTER REAR GROUND CABLE	14	BLACK

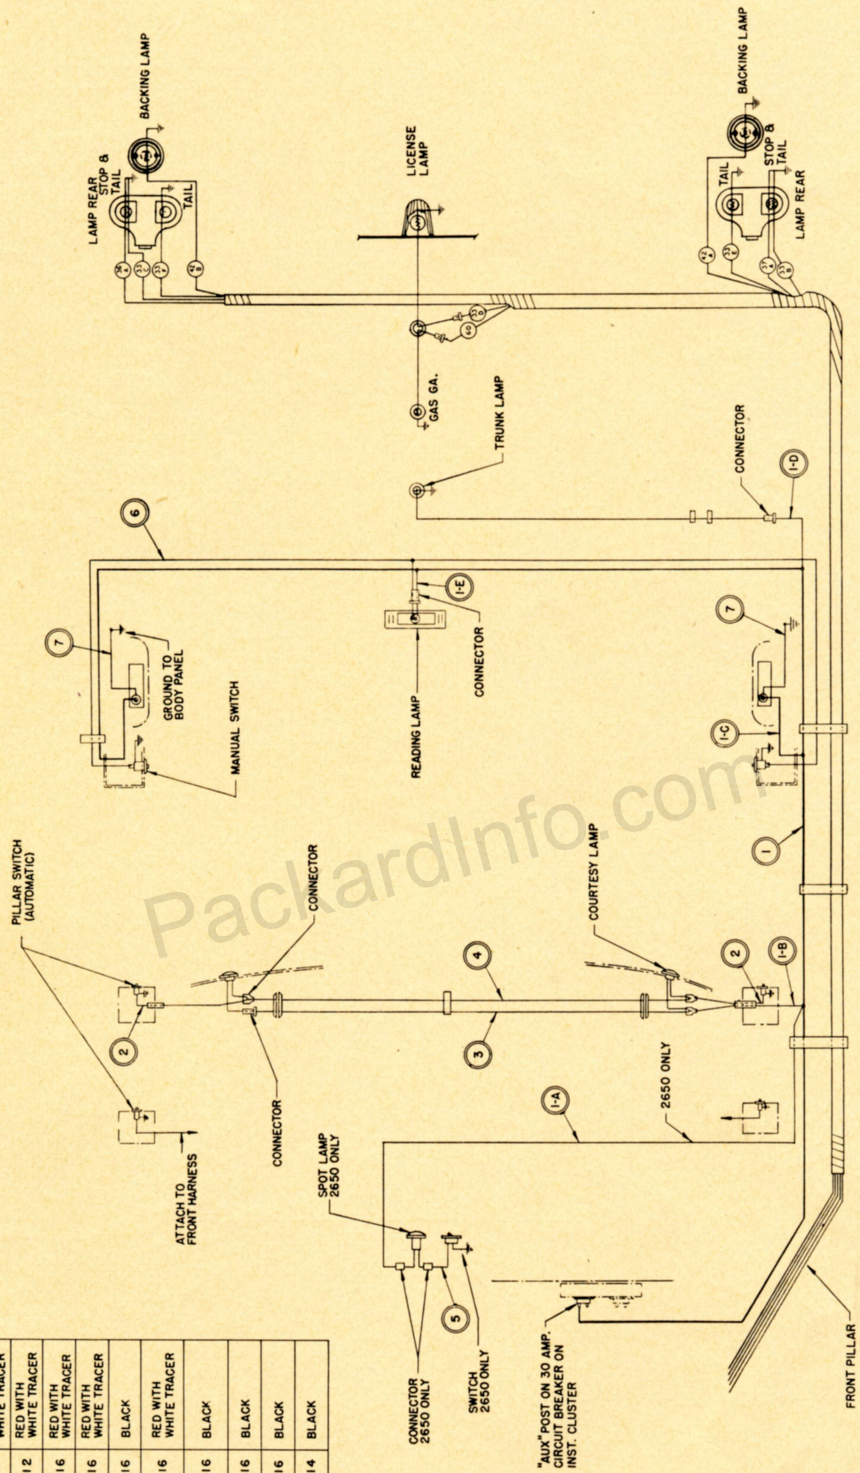

26th Series Rear Chassis and Body Wiring Diagram (Models 2650 and 2651)

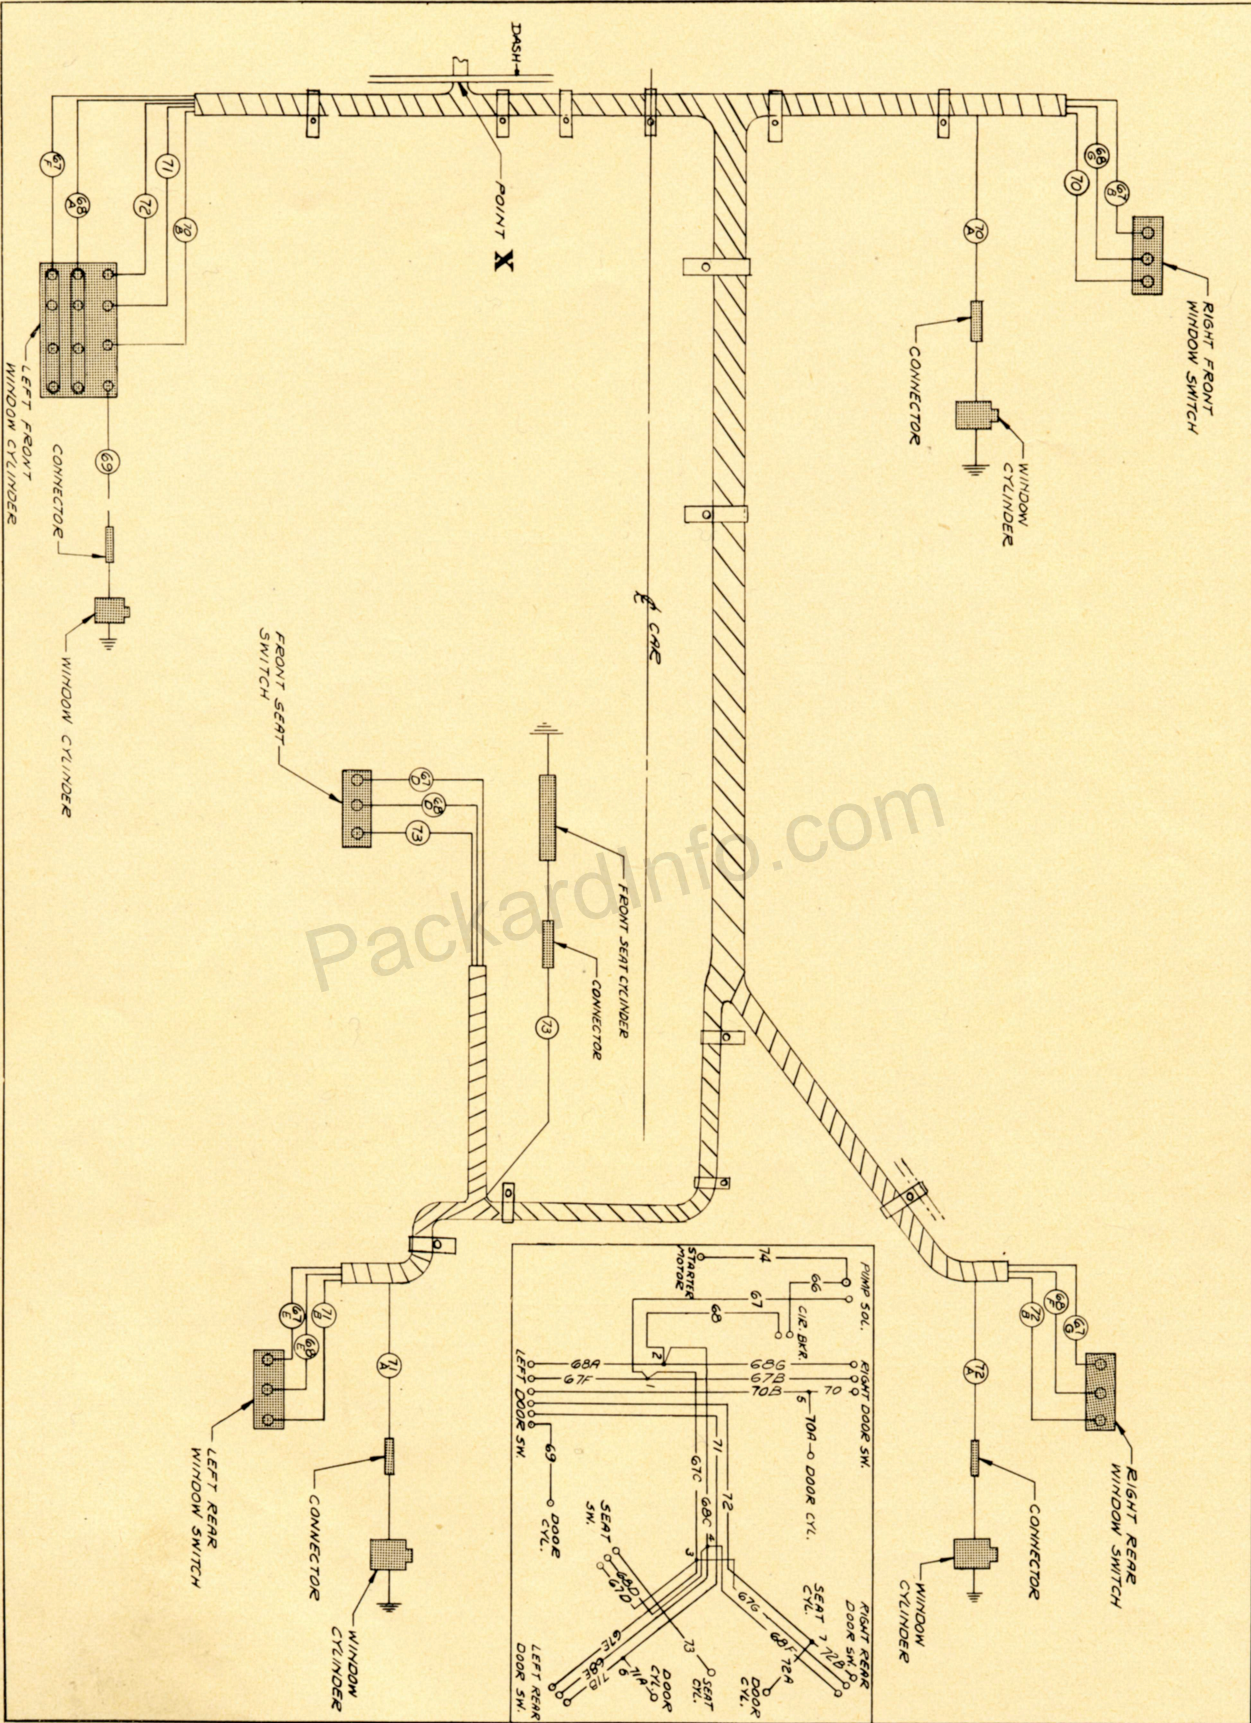

Electro-Hydraulic System Wiring Harness Layout (Models 2652 and 2672)